

## Can Bus:

### AUDI Q3 2018⇒






From  
**CARLIST32**  
and forward

With remote control  
or  
with keyless system



#### ELECTRICAL CONNECTIONS BETWEEN ALARM AND VEHICLE

Function	Alarm wire	Position in the vehicle	
<b>Power supply</b> <i>See pic. 1</i>	<b>Red</b>	Connect to the RED/PURPLE wire of 2,5 mm <sup>2</sup> cross section, pos. n° 73	in the 73-pins BLACK/WHITE connector marked "A" located under the dashboard on the driver side behind the kick wall, on the Black BCM with 3 connectors. <div style="text-align: center; margin-top: 20px;"> </div>
	<b>Black</b>	Connect to the BROWN wire of 2,5 mm <sup>2</sup> cross section, pos. n° 63	
<b>CAN BUS H</b> <i>See pic. 2</i>	<b>White/Green</b>	Connect to the GREEN or ORANGE/GREEN wire of 0,5 mm <sup>2</sup> cross section, pos. n° 16	
<b>CAN BUS L</b> <i>See pic. 2</i>	<b>White/Brown</b>	Connect to the ORANGE/BROWN wire of 0,5 mm <sup>2</sup> cross section pos. n° 17	
<b>Blinkers</b> <i>See pic. 3</i>	<b>Yellow/Green (Hazard)</b>	Connect to the PURPLE/RED wire of 0,35 mm <sup>2</sup> cross section, pos. n° 42, in the 73-pins BLACK/WHITE connector marked "C" located under the dashboard on the driver side behind the kick wall, on the Black BCM with 3 connectors.	
<b>Horn</b>	<b>White/Red</b>	Informazione attualmente non disponibile.	

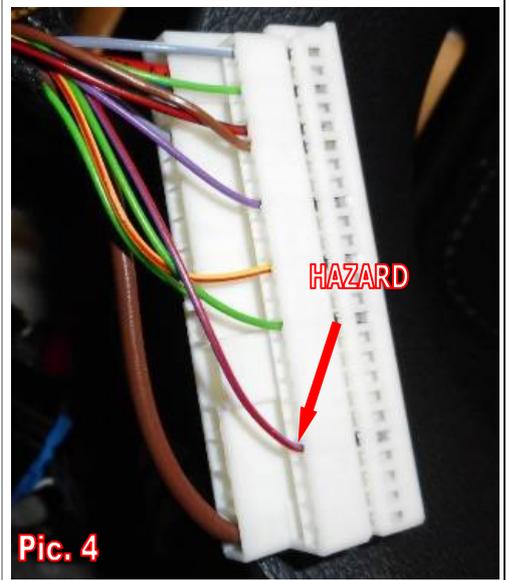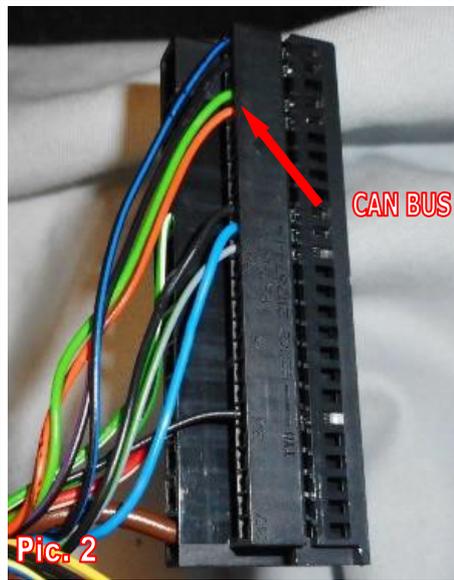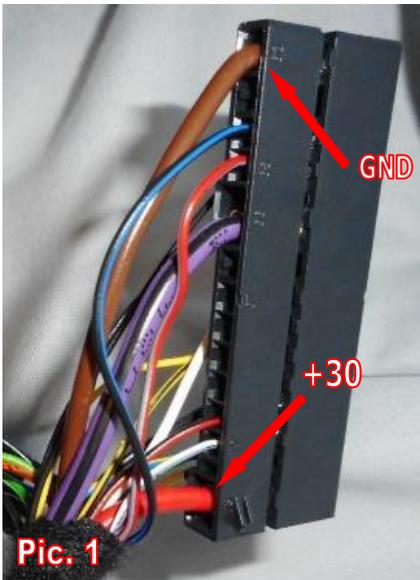

#### Optional Connections:

<b>Central door docking</b>	Purple (unlock)	<i>Informazione non disponibile</i>
	Blue/Yellow (lock)	
<b>Engine Immobilizer</b> Max 10A	<b>Green wires</b>	<b>Starter kill:</b> cut the RED wire, pos. 6 in the 16-pins connector located near the starter lock.
<b>Comfort command</b> Max 100 mA	<b>Brown/Black</b>	<i>Informazione non disponibile</i>