


PORSCHE CDR22 OU CRD220

Connection Instructions

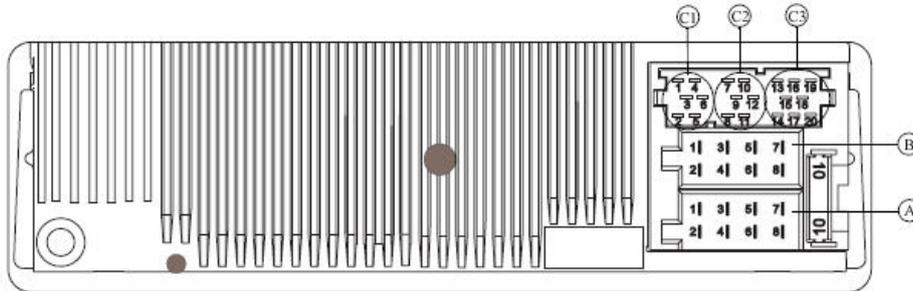

Socket A

- 1 Speed-dependent volume control
- 2 not assigned
- 3 Telephone mute / clearing function
- 4 Permanent positive (terminal 30)
- 5 Control output for automatic aerial / amplifier
- 6 Illumination (terminal 58d)
- 7 Switched positive (terminal 15)
- 8 Earth (terminal 31)

Socket B

- 1 Loudspeaker rear right +
- 2 Loudspeaker rear right -
- 3 Loudspeaker front right +
- 4 Loudspeaker front right -
- 5 Loudspeaker front left +
- 6 Loudspeaker front left -
- 7 Loudspeaker rear left +
- 8 Loudspeaker rear left -

Socket C1

- 1 LineOut rear left
- 2 LineOut rear right
- 3 AF earth
- 4 LineOut front links
- 5 LineOut front right
- 6 not assigned

Socket C2

- 7-11 Special connection for Porsche CD changer / MD changer

Socket C3

- 12 AF telephone input
- 13 Earth - telephone input
- 14-20 Special connection for Porsche CD changer / MD changer