



CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW

29-001 Alpine

1	3	5	7	9	11
2	4	6	8	10	12

29-002 Blaupunkt

1	3	5	7	9	11
2	4	6	8	10	12

29-003 Clarion

1	3	5	7	9	11
2	4	6	8	10	12

29-004 JVC

1	3	5	7	9	11
2	4	6	8	10	12

29-005 Kenwood
Single wire

1	3	5	7	9	11
2	4	6	8	10	12

29-005D Kenwood
4 pin DIN Plug

1	3	5	7	9	11
2	4	6	8	10	12

29-006 Panasonic
Standard CD units

1	3	5	7	9	11
2	4	6	8	10	12

29-006A Panasonic
AV head-units

1	3	5	7	9	11
2	4	6	8	10	12

29-009 Siemens
VDO

1	3	5	7	9	11
2	4	6	8	10	12

29-008 Sony
3v & 5v units

1	3	5	7	9	11
2	4	6	8	10	12

29-011 Zenec

1	3	5	7	9	11
2	4	6	8	10	12

29-020 Pioneer &
Sony

1	3	5	7	9	11
2	4	6	8	10	12

Special external drive
PCB version

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW

29-001 Alpine

1	3	5	7	9	11
2	4	6	8	10	12

29-002 Blaupunkt

1	3	5	7	9	11
2	4	6	8	10	12

29-003 Clarion

1	3	5	7	9	11
2	4	6	8	10	12

29-004 JVC

1	3	5	7	9	11
2	4	6	8	10	12

29-005 Kenwood
Single wire

1	3	5	7	9	11
2	4	6	8	10	12

29-005D Kenwood
4 pin DIN Plug

1	3	5	7	9	11
2	4	6	8	10	12

29-006 Panasonic
Standard CD units

1	3	5	7	9	11
2	4	6	8	10	12

29-006A Panasonic
AV head-units

1	3	5	7	9	11
2	4	6	8	10	12

29-009 Siemens
VDO

1	3	5	7	9	11
2	4	6	8	10	12

29-008 Sony
3v & 5v units

1	3	5	7	9	11
2	4	6	8	10	12

29-011 Zenec

1	3	5	7	9	11
2	4	6	8	10	12

29-020 Pioneer &
Sony

1	3	5	7	9	11
2	4	6	8	10	12

Special external drive
PCB version