

In order to use the device in the correct way, please read the manual carefully. We will not notice you the specification or design update of due to the technology improvement.



User Manual

car multimedia entertainment system

S200





Forward



Thank you for choosing the vehicle-mounted video navigation system product manufactured by our company!

Before use, please carefully read all the information randomly provided by our company. This manual will introduce the functions of the vehicle-mounted video navigation system of our company in order to make it easy and more convenient for you in use. You can obtain the knowledge about some aspects such as product introduction, usage method and other things so that you can use this product conveniently and quickly.

The picture example used in this manual may differ from the actual picture.

The content showed by the picture in this manual may differ from the actual content.

In terms of the ceaseless upgrade and renovation of products as well as the change of its function or relevant parameters, the additional remarks will be made without further notice. For details, please inquire the agents. Thank you for your support and cooperation!

Note: The information in this manual is protected by copyright. No part shall be photocopied or duplicated in any way without the prior written permission from the company. The final explanation right to this manual, the certificate of three guarantees as well as other relevant information is reserved by this company.

Contents



I. Functional operation	01
1. Start/close the machine	01
2. Main menu	01
3. Functional operation of radio	03
4. Functional operation of Bluetooth Handsfree	04
5. Functional operation of navigation	06
6. Functional operation of audio player	08
7. Functional operation of video player	09
8. AUX	09
9. Mirror Link	10
10. Functional operation of discs	11
11. CD play function	13
12. Settings	14
13. Functional operation of gallery browsing	16
14. Functional operation of file manager	17
15. Functional operation of event data recorder	17
16. Sound settings	18
17. Setting of steering wheel control	18
18. Television	18
19. Screen assistant	18
20. Voice search	19
21. Browser	19
22. IGO	19
II. Troubleshooting	20

Start/close the machine

Start-up


The machine can automatically enter the start-up state if the key is inserted again when it is unplugged to shut down the machine last time. Softly press the power button to start up the host when you start up the machine again if you press the power button on the panel to shut down the machine last time.

Shutdown

With the car key unplugged and after the system identifies the power shutdown, the automatic shutdown can be implemented. Long pressing the power button can make the system shut itself down (depending on specific vehicle types).

Main menu

1) When the system is switched on, it will enter the main menu interface by default (as shown in figure -01); Click the icon to enter the interface function operation.

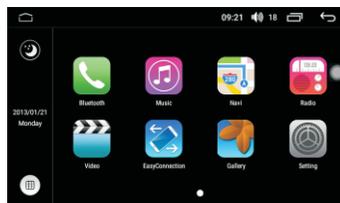


(01)

Click "  " to enter the menu and slide around (see figure -02) to check other applications.



(02)

Swipe left or click on the widget to enter the widget interface. (See figure -03)

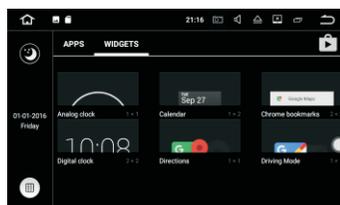


(03)

Click "  " to enter hibernation mode and click anywhere on the screen to wake up the car.

Start/close the machine


1) In the application icon interface, press the function icon for 2 seconds, then the icon in the shaking state, meanwhile, pressing the icon without leaving can make the icon be moved. Drag the application icon to the main interface and then the shortcut icon is created.

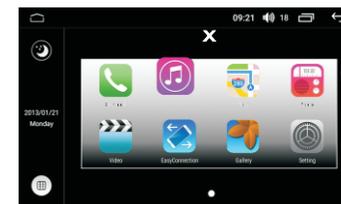

(04)

2) In the application icon interface, press the function icon for 2 seconds, then the icon in the shaking state, meanwhile, pressing the icon without leaving can make the icon be moved. Drag the icon up to the delete position and then the shortcut can be deleted (See figure -04).

Note: in any interface, click "  " to see the program running in the background; click APP thumbnail to enter this function operation interface; click "  " to close all running programs. (See figure -05)

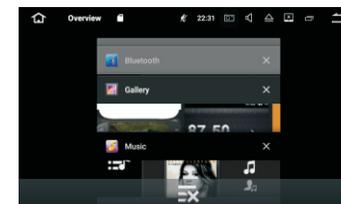

(05)

Functional operation of radio

➤ Enter / Exit

In the primary menu interface, click the "radio" icon to enter the radio interface, as shown in (Fig.-06):


Click "🏠" icon or return key to exit the radio interface.

The machine can store 6 stations. Press the prestore button at the bottom of the screen to save the current broadcasting station, and click the save button to broadcast the station.



(06)

➤ Touch function operation

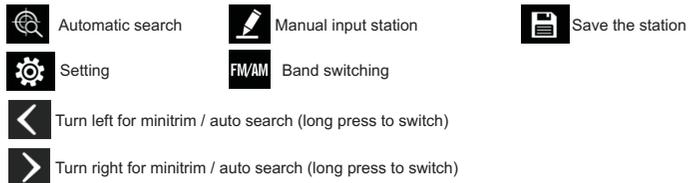

◀ Turn left for minitrim / auto search (long press to switch)

▶ Turn right for minitrim / auto search (long press to switch)

➤ Automatic search

Click the "🔍" icon to enter the automatic search state. The automatic storage can be realized meanwhile during the process of automatic search state. Click the automatic search icon to suspend the automatic search function.

Functional operation of Bluetooth Handsfree

1) This system provides the Bluetooth Handsfree function. If your mobile phone has the Bluetooth function, it can establish a point-to-point connection with this system to realize the functions including telephone dialing, answering and Bluetooth music broadcasting on the screen.

2) Due to the differences of the Bluetooth modules adopted by various mobile phone brands and the differences between software, some functions may vary with actual use and even can be incompatible. We apologize for the inconvenience caused.

➤ Enter / Exit

Click the "Bluetooth" icon in the main menu interface to enter the Bluetooth interface, as shown in (Fig.-07):



(07)

➤ Pairing and connection

1) To use the Bluetooth Handsfree function, you should establish a connection to pair the machine with the Bluetooth mobile phone and then click the "⚙️" icon to enter the Bluetooth setting interface, as shown in (Fig.- 8):

2) Set the Bluetooth to the "On" state and turn on the Bluetooth function of your mobile phone. Choose the "Bluetooth Connection" icon to enter the scanning interface of the available device and then click the "Scan" icon or directly turn on the Bluetooth of your mobile phone. After the system and mobile phone obtain the signal connection, the device name will appear on the screen of your mobile phone. Click the device name, and then the mobile phone will notify you to enter the PIN code (connection password). The "📶" icon will appear on the upper right of the screen after the successful pairing.



(08)


➤ Dial

1) You can directly dial through your mobile phone, or enter the number through the numeric keyboard on the screen. As shown in (Fig. 9):

2) Press the numeric keys on the screen to enter the number. The number entered can be displayed in the number field. Click the "📞" icon to dial, as shown in (Fig.-10):



(09)

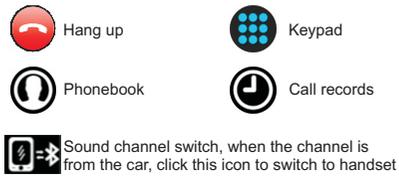

(10)

➤ **Enter / Exit**


This machine has the automatic synchronization function of the phone. When the phone is connected to the machine, the contacts on the phone will automatically synchronize to the host. Click " " icon to enter the contacts interface; click " " to automatically download the contacts; click " " to search the contacts; click " " to save the contacts, and click " " to delete the contacts. For example (figure -11):



(11)

➤ **Call record synchronization**

This machine has the function of automatic call record synchronization. When the mobile phone is successfully connected, the call records in the mobile phone can be automatically synchronized to the host. Click the " " icon to enter the call record interface where the missed calls, received calls as well as dialed calls can be checked. As shown in (Fig.-12):

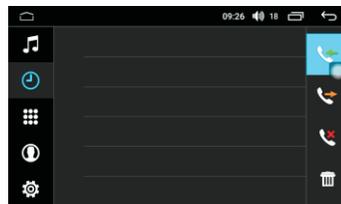


(12)



Bluetooth music

➤ **Enter / Exit**

Click the bluetooth music button to enter the bluetooth music play interface (See figure 13)

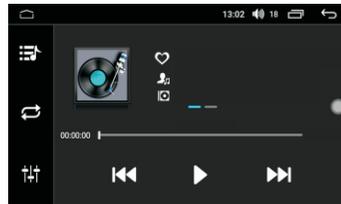

(13)

Functional operation of navigation

⚠ Note: This function can be effective when the GPS navigation module is installed.

➤ **Enter / Exit**

Click the "navigation" icon in the primary menu interface to enter the navigation interface. Navigation state, click the " " icon to exit the navigation interface.

➤ **Navigation music function**

When the radio/AV/DVD/ TV state and other states are switched to the GPS navigation, you can normally enjoy the music of original state. When the navigation prompt appears, the system can automatically switches to the navigation voice prompt state.

➤ **Volume adjustment**


In the navigation state, when the music is played, the system volume should be adjusted. When the navigation voice prompt appears, the navigation voice volume should be adjusted.

➤ **Function operation**


This machine has the functions including touching, handwriting input and destination search.

➤ **Notes before the navigation**

1.Please confirm that it is properly connected with the satellite antenna. During the period of power on, the satellite antenna have to receive satellite signals and update internal information. Wait a minute and then the system can get into the normal working condition. As shown in the right figure:

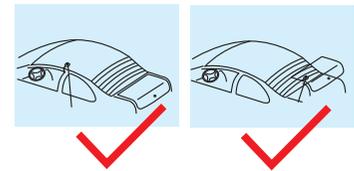


2.Please confirm that the vehicle is not located in the areas affecting signal reception such as "Under Bridge", "In Tunnel" and "Near Hall Buildings". As shown in (Fig. 19):

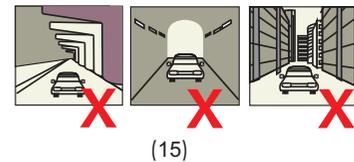

(15)

3.The driver should complete the setting of the machine in advance or the passenger can conduct the operation. Safe usage is the primary issue to ensure the safety of drivers, passengers and other people.

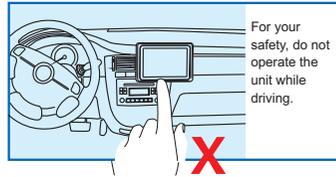

➤ Map reading

Due to the rapid development of urban construction as well as the urban and rural road traffic, and thanks to the ceaseless change of the traffic control information and traffic facilities of city streets. The navigation software company will continue to update the navigation electronic map. Please learn about the update information about the navigation electronic map of the navigation software company. Due to the changes of traffic regulations or temporary road control, the guiding line may be inconsistent with the traffic control condition on site.

Functional operation of music player


This function can play the music in the USB, SD card and other connecting devices (MP3 / WMA).

➤ Enter / Exit

In the main menu interface, click the "Music" icon to enter the music player interface, as shown in (Fig. -16).



Click "🏠" icon to exit the audio playback interface, and the playback function will continue in the background.

Click "🎵" icon to enter the list and track function interface. (see figure -17)

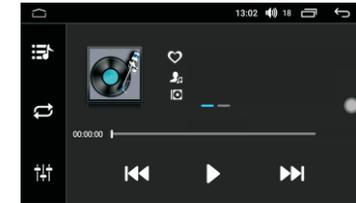

(16)

➤ Touch function operation

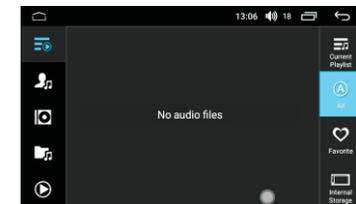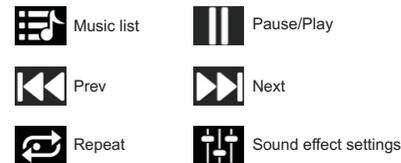

(17)

➤ Sound effect settings


Click "🔊" icon to enter the audio setting interface; (as shown in figure 18)

Drag the "📄" icon to adjust the volume. Users can choose their preferred mode according to the actual demand.



(18)

Click on the "📍" icon to freely adjust the sound source location (as shown in figure 19), and click on the direction button to fine tuning the sound source position. Users can also click on the default mode to achieve their desired effect.

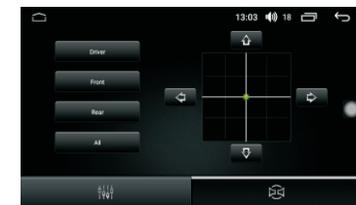


(19)

Video player function


Enter / Exit

1) Connect the device that contains the video files to the host; click the "video" icon on the main menu interface to enter the video player interface, as shown in (Fig. -20):

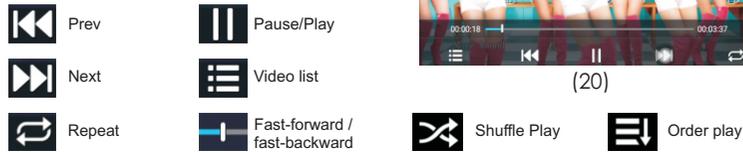

(20)

2) Click "List mode" icon to enter the video list interface. (as shown in figure 21)

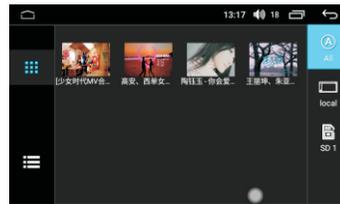

(21)

AUX1

This function is valid when an external audio and video signal is connected.

Enter / Exit

In the main menu interface, click the "AUX1" icon to enter the AUX1 interface, as shown in (Fig. -22):



(22)

Mirror Link

Mirror Link

Directly connect to the USB through the mobile phone charging line, (keep the screen in the bright state). Choose the USB debugging option in the settings of the mobile phone (settings->{developer options->USB debugging}).

Click on the " " icon to enter into the interface of the connection type, then choose one type you need (as shown in the following)



Choose one device suit for you.

Android USB connection

Android device connection need the installation of the " " APP. After successfully linked, you can synchronously operate the mobile phone and the car machine.



The interface of connecting)

Iphone WIFI connection

The mobile phone should connect the same WIFI hotspot with the car machine; and turn on the Airplay mirror image on your IPHONE at the same time.

After linked, the image can show on your car machine.



Connecting

Functional operation of discs

This machine supports multiple formats of the disc category including DVD/VCD/CD/MP3/MP4/JPG/CD-R, etc.

Enter / Exit

1)Click the "disc" icon in the main interface. After a few seconds, the screen will automatically enter the DVD player interface, as shown in (Fig. -23):



(23)


Disc out/in

1)Upturn the printed surface of the disc and then softly insert the disc from the bin gate. When the system detects the disc, it will automatically take, read and then play the disc.

2)When there is a disc in the disk bin, press the "▲" key on the panel to exit the disc.

3)If the disc has not been taken away after it is ejected within 15 seconds, the system will re-inhale the disc and play.

Control keyboard

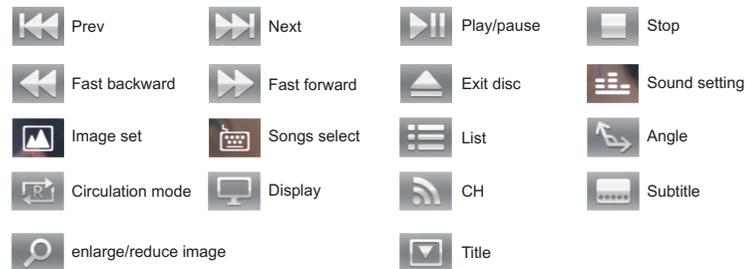

! Note: In radio/AV/TV playback state, it can automatically read the disc and switch to the DVD screen when the disc is inserted. In the navigation state, it can quickly read the disc, and can not switch directly to the DVD screen, but can normally listen to DVD music when the disc is inserted.

Disc playing

When there has been a DVD disc in the host and the disc has no playback menu, the system will automatically read the disc and play directly. When the disc has a playback menu, click the menu character directly to play. As shown in (Fig. 24):



(24)

If you want to choose the music that you want to listen to, you can directly touch the song name to enter the song play. When the disc supports subtitles, and display the relevant information on the screen, as shown in (Fig. -25):



(25)

In playback, you can touch the menu for various playback controls, the function definition of the touch menu is shown in Functional Operation of DVD.

CD disc playback

1) When there are CD discs in the host, click the "DVD" icon to enter the player interface (see figure 26):




(26)

2) Slide to the left in the function bar area at the bottom of the screen to display other function keys (see figure 27).



(27)

➤ CD interface function definition

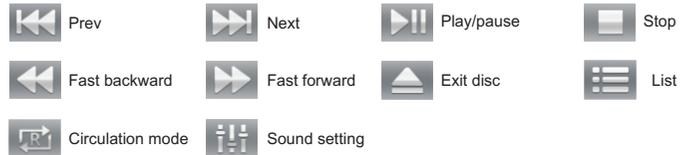

Settings

Click to set the icon, enter the setting operation interface to set the wireless settings, device settings, general settings, factory settings, and personal settings; the system sets the input operation.

➤ Wireless settings


Click the wireless settings to enter the operation interface (see figure - 28). Users can operate on WLAN, flow usage and hot spots.



(28)

➤ Device settings


In the device directory, it can operate on display, sound, GPS, storage, application, etc. (as shown in figure -29)

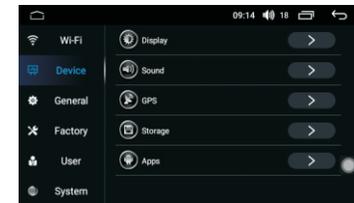

(29)

➤ General settings

In the general settings, you can turn on any key, set the brake, automatically enter the navigation, image time superposition, reverse mirror, and reverse with silent operation. (as shown in figure 30)

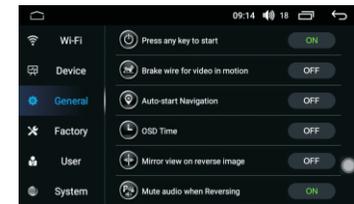


(30)

➤ Factory settings

This setting requires a password.

Enter a password (as shown in figure -31) to operate the dormancy setting, front view switch, radar switch, reversing track switch, reversing track switch, USB abnormal detection switch, external 4G switch, antenna normally open, MCU panel button, unknown source, car door lock interference, display application to read and write FLASH, automatic start-stop, air conditioner switch, door switch, DVD upgrade, DVR type, system special information, car logo, the volume

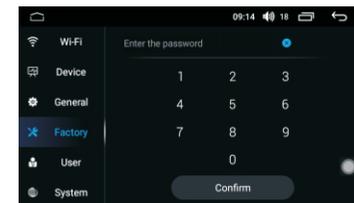


(31)

balance settings, model selection, TV type, video output settings, one-click installation settings, CAN upgrade box, display correction, MCU upgrade, study touch screen, backlight adjustment, the main screen application choice, bluetooth MIC sensitivity, etc.

➤ Personal settings


In personal settings, you can operate on the location information, security, language and input methods, GOOGLE settings, backup and reset, accounts, etc. (as shown in figure -32)

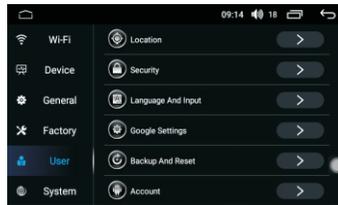

(32)

➤ System settings

In system settings, you can operate on the date and time, without hindrance, developer options, and about the vehicle. (as shown in figure -33)

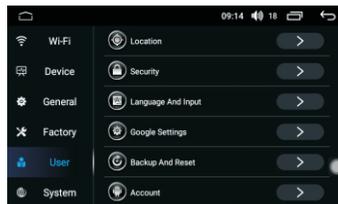


(33)

Functional operation of gallery browsing

Gallery is used to view all the pictures on the SD card / USB, and the gallery interface can display all the picture files on SD card, the files with pictures and videos, showing the picture details, deleting pictures, and supporting full screen to view pictures. Gallery is convenient for you to manage pictures on the SD card / USB.

➤ Enter / Exit

1) In the main menu interface, click the "Gallery" icon to enter the gallery list interface, as shown in (Fig.-34)

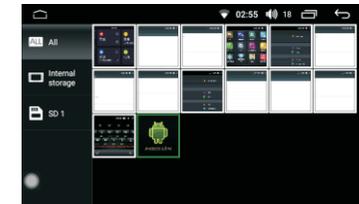

(34)

2) Click on the pictures file, and you can view the pictures in full screen, and can set the picture file, as shown in (Fig.-35):

-  Set as the wallpaper
-  Previous page
-  Next page
-  Auto-play the pictures
-  Rotate
-  Lis




(35)

Functional operation of file manager

Function of file management is to organize, distribute and recycle the space of the file storage, and is the function to store and protect the files. File management contains hard disk, SD card and USB, which can convert storage with each other according to the needs of users.


Enter / Exit

In the main menu interface, click the "File Manager" icon to enter the file management path selection interface, the user according to demand, select the appropriate path for file management (Fig. -35):

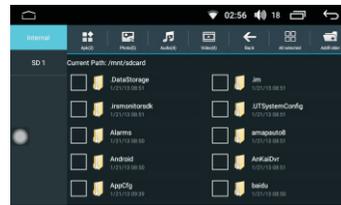

(36)

After selecting the file, click the button below to copy, cut and delete the selected files (as shown in figure -37).

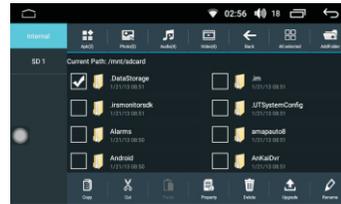

(37)


Functional operation of event data recording

This function requires a link to the driving record device.

Driving records provide users with self-test function, recording and storage functions of vehicle travel time, speeds and mileage, recording function, record and analysis function of accident suspect, display and print function, records for speeding and vehicle information, storage of video images (select cameras, SD card) and other functions.

Enter / Exit

In the menu, click the "automobile data recorder" icon to enter the automobile data recorder interface (see figure -38) :

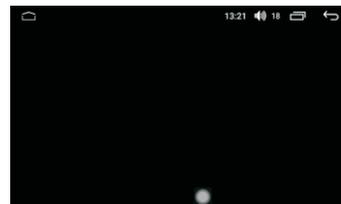

(38)

Efficacy settings

Enter / Exit

Click on the "efficacy settings" icon in the menu interface to enter the application management interface, and the detailed operation method refer to the operation of the sound setting on page 8.

Steering wheel control settings.

In the menu interface, click the "steering wheel control" icon to enter the steering wheel control interface (as shown in figure -39) :

Click on any icon on the interface, and click on "start" icon, then press on the function button relating to the steering wheel. This time, it will display the parameter on the interface. Press on the "✓" icon to finish the settings. Once finished, the prompts showing finishing will appear on the interface.



(39)

Television

In the menu interface, click "TV" icon to enter the TV operation interface (see figure -40):



(40)

Screen assistant


In the menu interface, click "screen assistant" icon to enter the TV operation interface (see figure -41):



(41)

Voice search

Click the "voice search" icon in the menu interface to enter the voice search interface; The users can perform operation on the car by voice. (See figure -42).

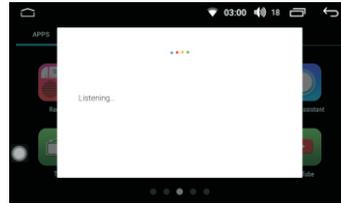

(图-42)

Browser

In the menu interface, click the "browser" icon to enter the browser interface (see figure -43); this feature requires a link to WIFI to search.



(图-43)

IGO

In the menu interface, click the "IGO" icon to enter the IGO operation interface (see figure -44);

The users can enter the destination and select the required driving route;

Click the Shoe map to display the map in full screen;



(图-44)



Problems	Reason	Measures (see)
LCD screen does not display	Burnout of protective tube	Replace with a new one
	The car engine does not start	Start engine
	The connecting line is loose	Reconnect
	Voltage of the battery is too low and the system automatically protects	Charge the battery to 12V
	Communication of the host and control system failed	Press the host reset button to reconnect
Cannot play sound	The system is in a mute state	Adjust volume
	The speaker cable is loose	Reconnect
	The speaker box is damaged	Change the new speaker box
Do not display the image playback	The disc is not properly placed	Re-put the discs
	Disc is dirt / damaged	Clean / try other discs
	The vehicle is moving	When the brake cable is detected to be open, it is unable to view the image while the car is moving
The volume level does not increase	This machine runs still and slow motion	There is no sound output during still and slow motion
USB / SD fails to play	Not connected	Confirm that the connection is correct
	File corruption or USB/SD damage	Renew the file / test the SD/USB connection under other devices
Occasional sound jumps	Disc is dirt or damaged	Try other discs
Bluetooth Handsfree has no effect	Not properly paired with the host	Pairing again
Bluetooth pairing is unsuccessful or cannot be paired	The equipment fails to support the specification needed by the system	Change the equipment with other specifications

Problems	Reason	Measures (see)
There is noise in the radio	The signal is too weak	Select other stations with strong signals
	The car antenna is not connected properly	Check the connection of the car antenna
Inaction on touch /slow response	Touch coordinate offsets	Recalibrate the touch coordinates
	Communication error of host control system	Press the reset hole of the host, or restart the machine
Backup is invalid	The reversing line is not connected correctly or properly	Reconnect
	Lens and radar are not properly connected	Reconnect
	Reversing setting is not set as "On"	Enter the system setting to set the reversing as "on"
No sound on the keypad	Has not set the keypad tone	Under the general settings, set the "Keypad Tone Type"
Handbrake is invalid	The hand brake line is not connected correctly or properly	Reconnect
	The "Brake Detection" in the general settings is not turned on	Enter the general setting to turn on the "Brake Detection" function
Steering wheel control is invalid	Reconnect	The steering wheel lead is not properly connected to the host steering wheel control line
	The steering wheel fails to dock with the host	Recalibrate the steering wheel to learn
	Steering wheel control is not compatible with the host	When the brake cable is detected to be open, it is unable to view the image while the car is moving

Note: Before sending the faulty machine to repair, please follow the table below, and take appropriate measures to simply inspect or adjust the machine according to the possible causes of the problem, which is possible to troubleshoot. If it cannot effectively solve the problem, please contact us or designated professional service center.