


UNICOM PLUS RENAULT CONNECTIONS

rev. 1.10



ATTENTION:
POWER UNICOM TO AN IGNITION.
CONNECT THE CIRCUIT ONLY WHEN THE
CONNECTION ARE TERMINATED

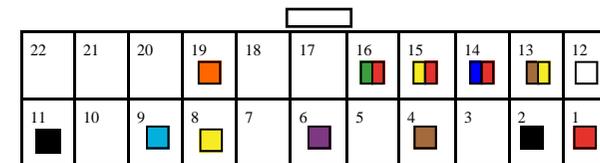

CONNECTORS VIEW: FROM WIRES OUTPUT SIDE

DO NOT CONNECT THE WIRES PRESENT ON THE CABLE BUT NOT MENTIONED IN THE CONNECTIONS DIAGRAMS

CABLE	CONNECTION
RED (1)	POWER FEEDING IGNITION POSITIVE
BLACK (2)	NEGATIVE POWER FEEDING
BROWN (4)	RADIO - CODE REMOTE CONTROL
VIOLET (6)	RADIO - RESISTIVE REMOTE CONTROL
BLACK (11)	REMOTE CONTROL FOR THE RADIO

WARRANTY

THIS PRODUCT IS GUARANTEED FOR TWO YEARS AGAINST ANY MANUFACTURING DEFECT.
PURCHASE INVOICE IS REQUIRED AS A VALIDITY OF THE GUARANTEE.

For any assistance, please contact the technical support number: 0141-947676

The information in this guide are purely for information purposes, therefore, are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.

IF THE MENTIONED COLOURS ARE DIFFERENT TO THE VEHICLE'S ONES, PLEASE FOLLOW THE POSITIONS

	SCENIC	MEGANE	VEL SAVIS CLIO LAGUNA
RED	POSITIVO SOTTOCHIAVE		
BLACK	GND		
YELLOW	RED	GREY	BROWN
ORANGE	NON COLLEGARE		
YELLOW RED	GREEN	BEIGE	ORANGE
RED BLUE	YELLOW	GREEN	BEIGE
YELLOW BROWN	LIGHT BLUE	ORANGE	VIOLET
LIGHT BLUE	BLACK	VIOLET	GREY
WHITE	BROWN		
GREEN RED	DO NOT CONNECT		

ALWAYS DISCONNECT AND KEEP DISCONNECTED THE CONNECTOR FROM THE CAR DISPLAY

SCENIC II

TRAFFIC 07

	MEGANE SCENIC II - TRAFFIC			
RED	IGNITION POSITIVE			
BLACK	GND			
YELLOW	WHITE	POS.11	VIOLET	
ORANGE	DO NOT CONNECT			
YELLOW RED	GREY	POS.10	BROWN	
RED BLUE	BROWN	POS.8	BEIGE	
YELLOW BROWN	ORANGE	POS.9	YELLOW	
LIGHT BLUE	GREEN	POS.12	RED	
WHITE	BLACK	POS.13	BLACK	
GREEN RED	DO NOT CONNECT			

Connector 24 POLES

Connector 30 POLES

Connector 40 VIE

For the 30 POLES, cut the connector's wires from the 16 to the 21.
For the 24 POLES, cut the connector's wires from the 1 to the 6.
Connect the Unicom's wires to the steering wheel side.
Done the connections, connect again the connector to the display.

For the 40 POLES, cut the connector's wires from the 13 to the 18 and connect the module's wires that go to the joystick following the positions indicated here below.

	CONNECTOR 24 poles	CONNECTOR 30 poles	CONNECTOR 40 poles
RED	POSITIVE IGNITION FEEDING		
BLACK	NEGATIVE FEEDING		
YELLOW	POS.4	POS. 19	POS. 16
ORANGE	DO NOT CONNECT		
YELLOW RED	POS.3	POS. 20	POS 13
RED BLUE	POS.2	POS. 18	POS 14
YELLOW BROWN	POS.1	POS. 16	POS 15
LIGHT BLUE	POS.5	POS. 21	POS. 17
WHITE	POS.6	POS. 17	POS.18
GREEN RED	DO NOT CONNECT		