

Can Bus:

MERCEDES SPRINTER (w907) 2018⇨


DIP SWITCHES SELECTIONS OR SOFTWARE

from **CARLIST35**
and higher



ELECTRICAL CONNECTIONS BETWEEN ALARM AND VEHICLE

Function	Alarm wire	Position and vehicle connections
Power supply	Red	Connect to the RED wire in the fuse box
	Black	Connect to the original ground node behind kick-wall passenger side.
CAN BUS H <i>pic. 1 and 2</i>	White/Green	in the 20-pins WHITE connector on the White BCM located behind kick-wall passenger side.
CAN BUS L <i>pic. 1 and 2</i>	White/Brown	
BLINKER	--	Not to be connected. Blinkers are working through CAN BUS.
HORN	White/Red	Info not available.

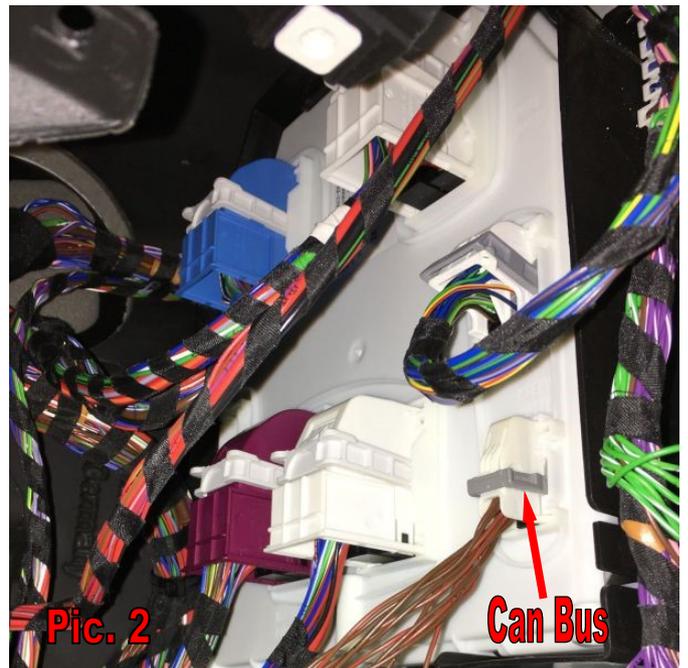

Optional connections:

Central door locking	Purple wire (unlock)	Info not available.
	Blue/Yellow (lock)	
Engine Kill Max 10A	Green wires:	Info not available.
Comfort command	Brown/Black wire:	Info not available.