

### Can Bus: MERCEDES SPRINTER (w907 – w910) 2018⇒



DIP SWITCHES SELECTIONS OR SOFTWARE

from **CARLIST35**  
and higher



CONNECTIONS FOR SHORT WHEELBASE VEHICLE W907 WITH THE WHITE BCM UNIT UNDER PLASTIC COVER AT THE RIGHT OF PASSENGER SIDE  
CONNECTIONS FOR SHORT WHEELBASE VEHICLE W910 WITH THE WHITE BCM UNIT UNDER PLASTIC COVER AT THE LEFT OF PASSENGER SIDE

Function	Alarm wire	Position and vehicle connections	
<b>Power supply</b> <i>Pictures 1</i>	<b>Red</b>	Connect to the 6mm <sup>2</sup> RED wire located in the WHITE connector in the back of the fuse box under the footrest at the passenger side. Or connect to the RED/GREEN wire pos. 37 in the 63-pins LIGHT-BLUE connector at the top left in the WHITE BCM unit located under dashboard behind plastic cover at the right of passenger side (W907) or behind plastic cover at the left of passenger side near the central tunnel (W910).	
	<b>Black</b>	Connect to the original ground node located behind plastic cover at the right of passenger side.	
<b>CAN BUS H</b> <i>Pictures 2</i>	<b>White/Green</b>	Connect to BROWN/RED wire, pos. 3	of the 20-pins WHITE connector at the bottom right in the WHITE BCM unit located under dashboard behind plastic cover at the right of passenger side (W907) or behind plastic cover at the left of passenger side near the central tunnel (W910).
<b>CAN BUS L</b> <i>Pictures 2</i>	<b>White/Brown</b>	Connect to the BROWN wire, pos. 13	
<b>HORN</b>	<b>White/Red</b>	Info not available	

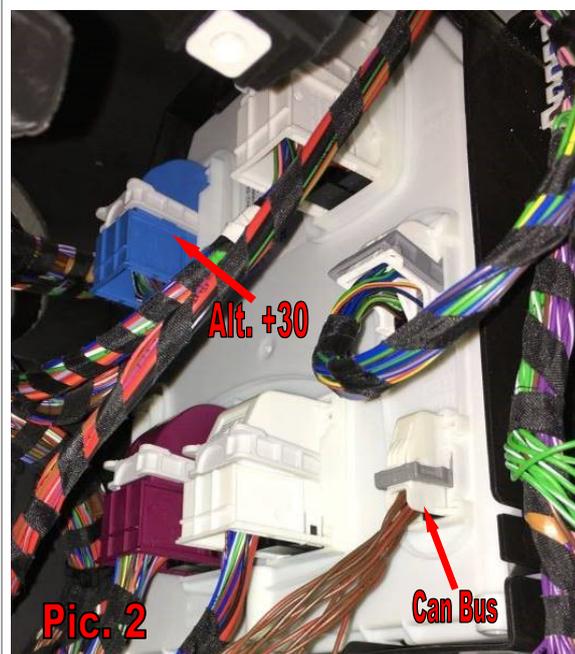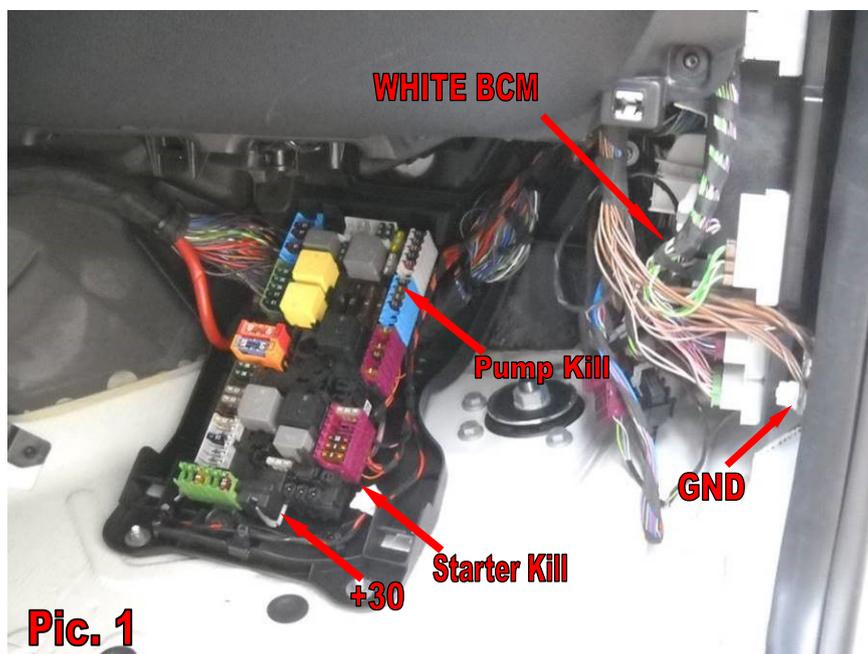

#### Optional Connections:

<b>Central Doors Locking</b>	<b>Yellow/Blue Purple</b>	Do not connect, the functionality is obtained by CAN BUS
<b>Engine Kill Max 10A</b> <i>Pictures 1, 5 and 6</i>	<b>Green wires</b>	<b>Starter:</b> cut the PURPLE wire in the WHITE connector located in the back of the fuse box under the footrest at the passenger side. <b>Fuel Pump:</b> cut the wire of the second fuse (5A) in the LIGHT-BLUE fuse-holder located in the fuse box under the footrest at the passenger side.
<b>Comfort</b>	<b>Brown/Black</b>	<i>Info not available</i>

## Can Bus:

### MERCEDES SPRINTER (W907 – W910) 2018⇨


DIP SWITCHES SELECTIONS OR SOFTWARE

from **CARLIST35**  
and higher



CONNECTIONS FOR LONG WHEELBASE VEHICLE W910 WITHOUT THE WHITE BCM UNIT UNDER PLASTIC COVER AT THE RIGHT OF PASSENGER SIDE

Function	Alarm wire	Position and vehicle connections	
<b>Power supply</b> <i>Pictures 3 and 4</i>	<b>Red</b>	Connect to the RED/BROWN wire located near the two BLACK electronic units located under dashboard behind plastic cover at the right of passenger side	
	<b>Black</b>	Connect to the original ground node located under dashboard behind plastic cover at the right of passenger side.	
<b>CAN BUS H</b> <i>Pictures 3 and 4</i>	<b>White/Green</b>	Connect to BROWN/RED wire, pos. 35	of the 40-pins BLUE connector at the bottom of the BLACK electronic unit located under dashboard behind plastic cover at the right of passenger side.
<b>CAN BUS L</b> <i>Pictures 3 and 4</i>	<b>White/Brown</b>	Connect to the BROWN wire, pos. 15	
<b>HORN</b>	<b>White/Red</b>	Info not available	

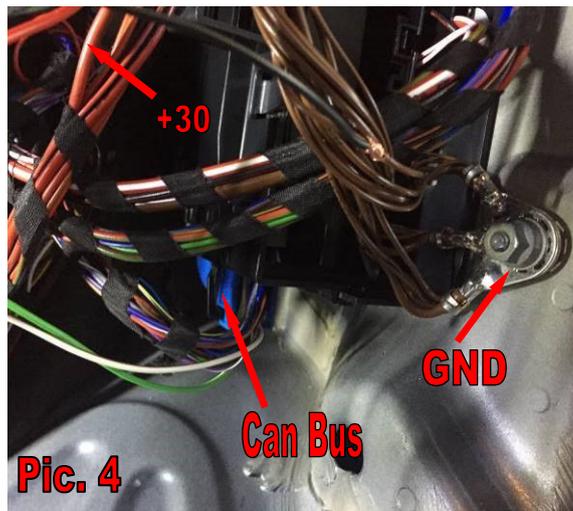

### Optional Connections:

<b>Central Doors Locking</b>	<b>Yellow/Blue Purple</b>	Do not connect, the functionality is obtained by CAN BUS
<b>Engine Kill</b> <b>Max 10A</b> <i>Pictures 1, 5 and 6</i>	<b>Green wires</b>	<b>Starter:</b> cut the PURPLE wire in the WHITE connector located in the back of the fuse box under the footrest at the passenger side. <b>Fuel Pump:</b> cut the wire of the second fuse (5A) in the LIGHT-BLUE fuse-holder located in the fuse box under the footrest at the passenger side.
<b>Comfort</b>	<b>Brown/Black</b>	<i>Info not available</i>