

Can Bus:

VOLKSWAGEN T-ROC 2017⇨






From
CARLIST32
and forward

With remote control
or
with keyless system



ELECTRICAL CONNECTIONS BETWEEN ALARM AND VEHICLE

Function	Alarm wire	Position in the vehicle
Power supply <i>See pic. 1</i>	Red	Connect to the RED wire pos. 66,
	Black	Connect to the BROWN wire pos. 63,
CAN BUS H <i>See pic. 2</i>	White/Green	in the 73-pins BLACK connector marked "A" located under the dashboard on the driver side behind the fuse box, on the Black ECU with 3 connectors.
CAN BUS L <i>See pic. 2</i>	White/Brown	
Blinkers <i>See pic. 3</i>	Yellow/Green (Hazard)	Connect to the BROWN/RED wire, pos. n° 42, in the 73-pins BLACK connector marked "C" located under the dashboard on the driver side behind the fuse box, on the Black ECU with 3 connectors.
Horn	White/Red	Information not available

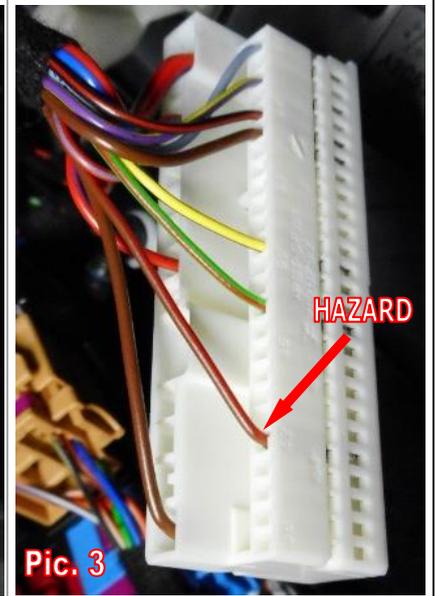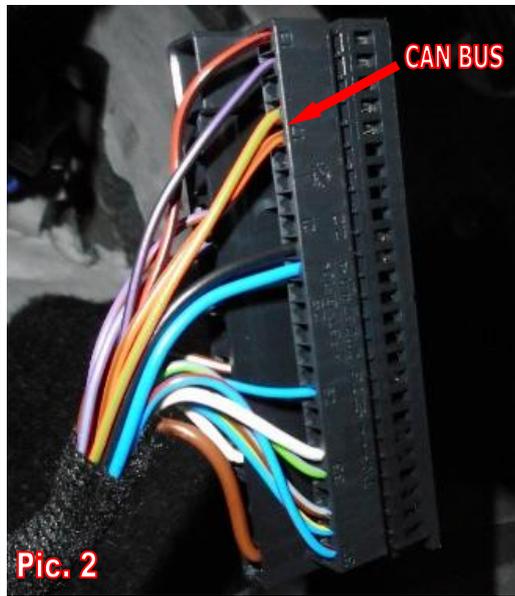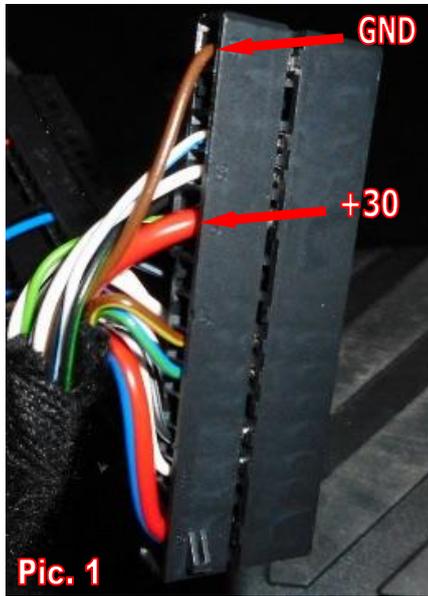

Optional Connections:

Central door docking	Purple (unlock)	Information not available
	Blue/Yellow (lock)	
Engine Immobilizer Max 10A	Green wires	Starter kill: cut the WHITE wire pos. 1 in the 5-pins WHITE connector directly connected to the starter lock.
Comfort command Max 100 mA	Brown/Black	Information not available