

FITTING INSTRUCTION

Can Bus: Volvo XC40 2017 ⇨

DIP SWITCHES OR SOFTWARE SELECTION


From **CARLIST33** and forward

Remote Controls and Keyless Access



CONNECTIONS BETWEEN ALARM AND VEHICLE

Function	Alarm wire	Position and vehicle connections
Power supply	Red	Connect to the wire in the position 16 in the diagnostic OBD connector.
	Black	Connect to a chassis ground node under kick wall driver side.
CAN BUS <i>Pic. 1</i>	White/Green Can H	Connect to the PURPLE/WHITE wire, pos. 19 in the 76-pins BROWN connector located on the BCM unit under dashboard driver side. Wires can be also detected because come from driver door.
	White/Brown Can L	
Blinker <i>Pic. 2</i>	Yellow/Green Hazard	Connect to the BROWN/GREY wire pos. 6 located in the 10-pins GREEN connector behind the keyboard for multimedia control where is located the hazard pushbutton.
Horn	Red/White	Info not available.

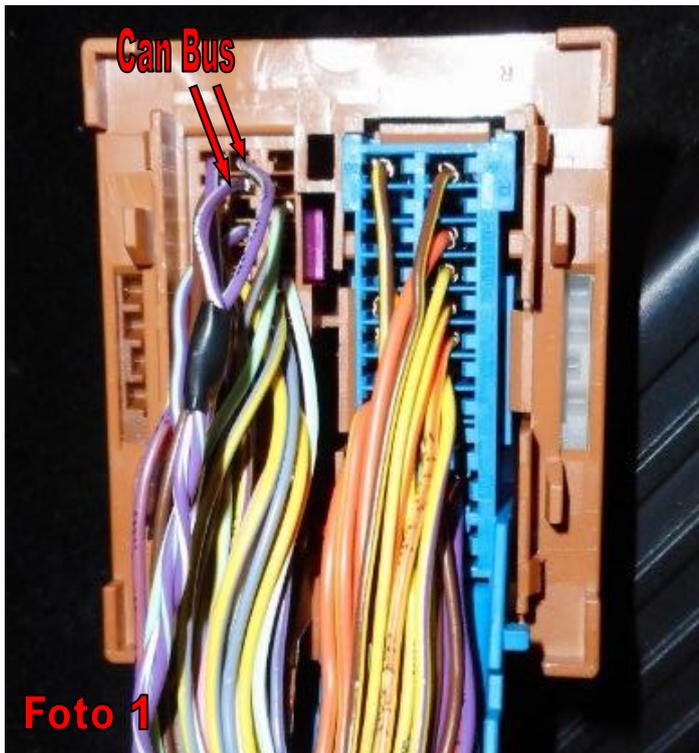

Optional connections:

Engine Kill 10A	Green wires	Starter: cut the BLUE wire in the 4-pins LIGHT BLUE connector under the fuse-box in the engine compartment.
--------------------	-------------	---