

...connecting to the aftermarket

CTSCV007.2

Chevrolet Steering Wheel Control Interface















Vehicle Application

Chevrolet Avalanche Chevrolet S-10 Chevrolet Cavalier Chevrolet Corvette Chevrolet Impala Chevrolet Malibu Chevrolet Monte-Carlo Chevrolet Silverado Chevrolet Suburban	2002 - 2006 2003 - 2005 2000 - 2005 2007 - 2013 2000 - 2005 2001 - 2003 2000 - 2005 2003 - 2006 2003 - 2006	Chevrolet Tahoe Chevrolet Trailblazer Chevrolet Uplander Chevrolet Venture-Van Chevrolet Express-Van	2003 - 2006 2002 - 2009 2005 - 2008 2002 - 2005 2003 - 2007
---	---	--	---

Key Features

- Retains Steering Wheel Controls
- Retains Vehicle Warning Chimes
- Retains Standard BOSE Amplified Systems

NB: Not for use with Digital BOSE Systems (Y91/Z75). Does not retain OnStar





ABOUT THIS PRODUCT

CTSCV007.2

CAN-Bus Steering Wheel Control Interface for select Chevrolet vehicles with standard BOSE amplified systems. Retains steering wheel controls, vehicle warning chimes and standard BOSE amplified systems. Not for use with digital BOSE systems (Y91/Z75). Does not retain OnStar

WIRING COLOUR CODES

Right Rear Speaker + Purple Purple/Black Right Rear Speaker -Green Left Rear Speaker + Green/Black Left Rear Speaker -Grev Right Front Speaker + Grev/Black Right Front Speaker -White Left Front Speaker + White/Black Left Front Speaker -

Yellow Permanent 12V
Black Ground
Red Ignition 12V
Orange Illumination

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. **Connects2 can not be held responsible for the installation of this product.**

TECHNICAL SUPPORT

Connects2 Ltd. want to provide a fast and suitable resolution to any problems encountered during installation of this product. To get in touch with our dedicated technical support team, please fill in a ticket at support.connects2.com and provide as much information as possible.

FOLLOW US ON SOCIAL MEDIA for all the latest updates



/CONNECTS2
Watch us on YouTube



/CONNECTS/ Like us on facebook



CONNECTS2LTD
Follow us on instagram








FITTING GUIDE

- 1. Remove and disconnect the original head unit.
- 2. Connect the 12 way molex connector of the head unit patch lead (supplied separately) to the interface (Connection A, Fig. 1). Do not connect the 14 way molex connector (Connection B) at this stage.

Fig. 1

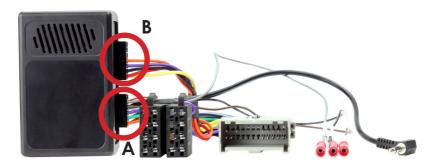

3. Connect the opposite end of head unit patch lead to the head unit steering wheel control input on the back of the aftermarket head unit.

NB: This may be a 3.5mm jack plug or a wire input depending upon the head unit brand being fitted. Please see the head unit installation manual for further information on where to connect.

Important: This step must be completed before connecting power to the interface. Failure to so do may result in no steering wheel control function.

Fig. 2



- 4. Connect the 14 way molex connector to the interface (Connection B, Fig. 1)
- 5. Connect the male power/speaker ISO harness to the female power/speaker ISO harness from the aftermarket head unit. For aftermarket head units without an ISO connector, please refer to "Wiring Colour Codes" on Pg. 2.







FITTING GUIDE

6. Connect the female vehicle specific connectors on the harness to the male vehicle connector from the vehicle. Test head unit for correct operation.

STEERING WHEEL CONTROL FUNCTIONALITY

1	Mute/Voice Activation
2	Preset/Band
3	Source
4	Source
5	Track +
6	Volume +
7	Volume -
8	Track -

