

SWNI00--



Kit de commande au volant pour véhicule Nissan 2003→2013, choisir son faisceau selon son véhicule et son année de production suivre le tableau suivant :

Application

Harness A

Qashqai 2007-2013
X-Trail 2009-2014
Micra 2007-2010
Rogue 2007-2013
Juke 2010>
Micra 2010>
Sunny 2012>
March 2010>
Pulse 2011>
Ewalla 2013>
Versa 2008>
Note 2012>

Frontier 2009>
Pathfinder 2013>
Versa Note 2013>
NV200 2013>
Quest 2010>
Cube 2009>
Xterra 2009-2016
Titan 2009>
Navara 2009>
Sentra 2013>
Note 2009-2012
Cabstar 2014>

Harness B


Navara 2006>
350Z 2003>
X-Trail 2001>

For vehicles with 6 &
10 Way connector

Harness C

X-Trail 2001 - 2008
Almera 2000 - 2006
Primera 2001 - 2007
Terrano 2001 - 2006


For vehicles with 8/16
way connector

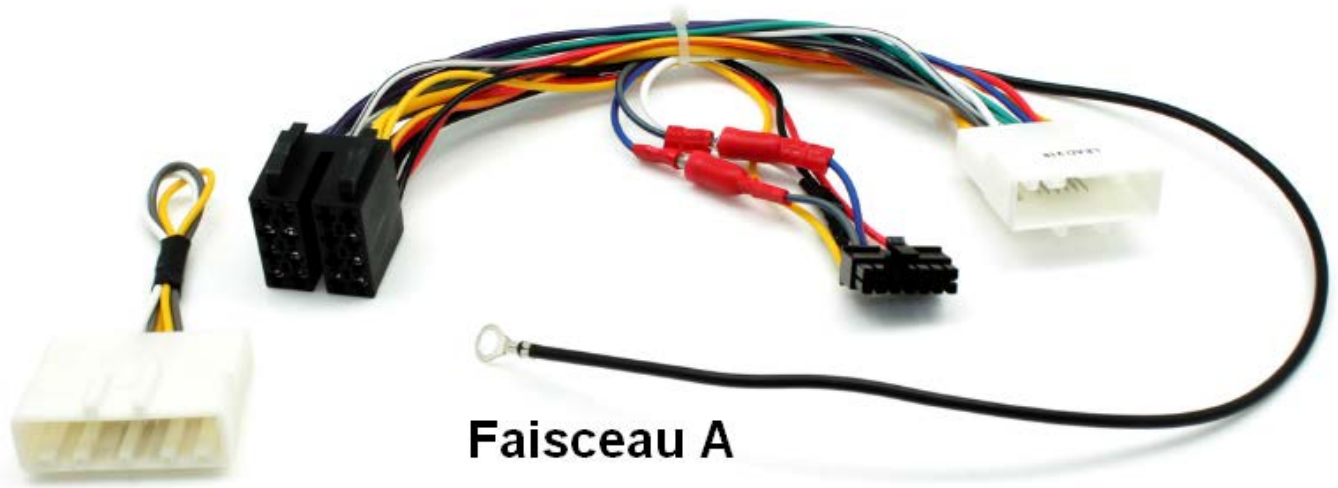

Faisceau A



Faisceau B

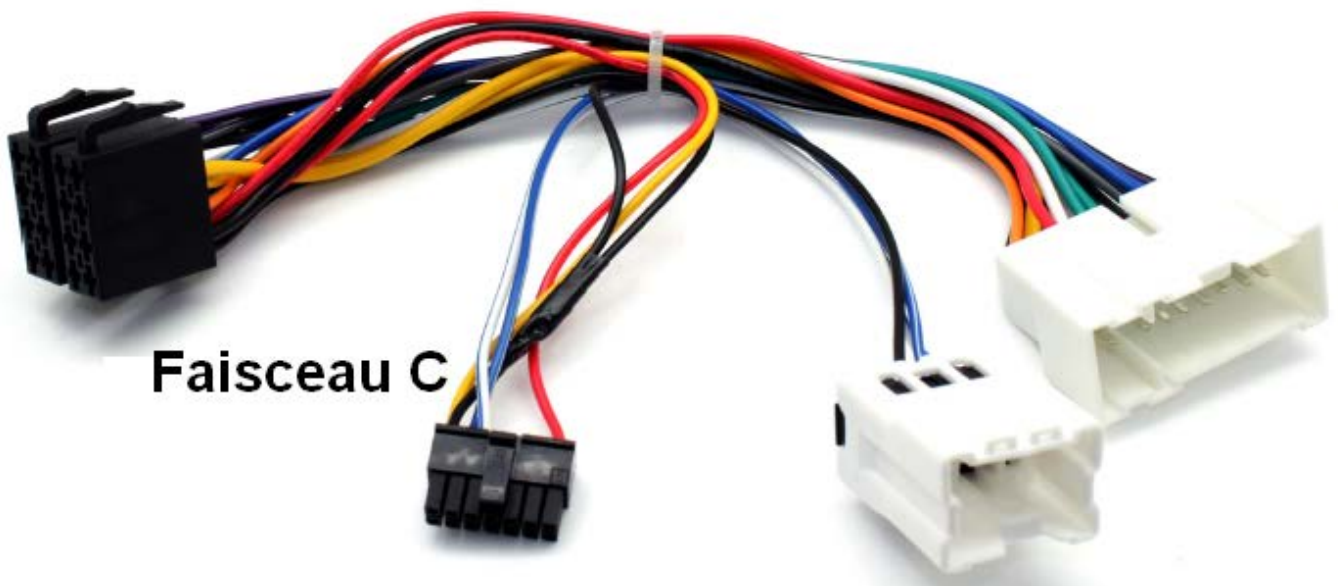

Faisceau C

Réglage des Dip Switch

Toujours changer la position des Dip-switch centrale débranchée

Make	Model	Year From	Year To	Harness	Connector	Phone Button Support	CAN/Analogue	Dipswitch Setting						
								1	2	3	4	5	6	7
Nissan	350Z	2003		Harness A		X	Analogue	ON	ON	ON	-	ON	ON	-
	Almera	2000	2008			X	Analogue	ON	ON	ON	-	ON	ON	-
	Cube	2009				√	Analogue	ON	-	ON	ON	-	-	ON
	Evalia	2013				√	Analogue	ON	-	ON	ON	-	-	ON
	Frontier	2009				√	Analogue	ON	-	ON	ON	-	-	ON
	Juke	2010				√	Analogue	ON	-	ON	ON	-	-	ON
	March	2010				√	Analogue	ON	-	ON	ON	-	-	ON
	Micra	2007	2010			√	Analogue	-	-	-	ON	-	ON	ON
	Micra	2010				√	Analogue	ON	-	ON	ON	-	-	ON
	Navara	2010				√	Analogue	-	-	-	ON	-	ON	ON
	Navara	2009				√	Analogue	ON	-	ON	ON	-	-	ON
	Navara	2008				X	Analogue	ON	ON	ON	-	ON	ON	-
	Note	2012				√	Analogue	ON	-	ON	ON	-	-	ON
	Note	2009	2012			√	Analogue	ON	ON	ON	ON	-	-	ON
	NV200	2013				√	Analogue	ON	-	ON	ON	-	-	ON
	Pathfinder	2013				√	Analogue	ON	-	ON	ON	-	-	ON
	Primera	2001	2007			X	Analogue	ON	ON	ON	-	ON	ON	-
	Pulse	2011				√	Analogue	ON	-	ON	ON	-	-	ON
	Qashqai	2007	2013			√	Analogue	-	-	-	ON	-	ON	ON
	Quest	2010				√	Analogue	ON	-	ON	ON	-	-	ON
	Sentra	2013				√	Analogue	ON	-	ON	ON	-	-	ON
	Sunny	2012				√	Analogue	ON	-	ON	ON	-	-	ON
	Terrano	2001	2008			X	Analogue	ON	ON	ON	-	ON	ON	-
	Tilda	2007	2014			√	Analogue	ON	ON	ON	ON	-	-	ON
	Titan	2009				√	Analogue	ON	-	ON	ON	-	-	ON
	Versa	2008				√	Analogue	ON	-	ON	ON	-	-	ON
	Xterra	2009				√	Analogue	ON	-	ON	ON	-	-	ON
	X-Trail	2009	2014			√	Analogue	-	-	-	ON	-	ON	ON
	X-Trail	2013				X	Analogue	-	ON	ON	ON	-	-	ON
	X-Trail	2001				X	Analogue	ON	ON	ON	-	ON	ON	-
X-Trail	2001	2008		X	Analogue	ON	ON	ON	-	ON	ON	-		
Navara	2008			Harness B	6 & 10 Way connector	√	Analogue	ON	ON	-	ON	-	-	ON
350Z	2003				7 & 10 Way connector	√	Analogue	ON	ON	-	ON	-	-	ON
X-Trail	2001				8 & 10 Way connector	√	Analogue	ON	ON	-	ON	-	-	ON
X-Trail	2001	2008		Harness C	8/16 way connector	√	Analogue	-	-	ON	ON	-	-	ON
Almera	2000	2008			8/16 way connector	√	Analogue	-	-	ON	ON	-	-	ON
Primera	2001	2007			8/16 way connector	√	Analogue	-	-	ON	ON	-	-	ON
Terrano	2001	2008			8/16 way connector	√	Analogue	-	-	ON	ON	-	-	ON

Dip-switch n° 8 : OFF pour autoradio Sony en ON pour toutes les autres marques :

Après avoir réglé vos dip-switch selon votre véhicule :

1- Connecter l'adaptateur commande au volant à la centrale



2- Connecter l'adaptateur commande à l'entrée commande au volant de l'autoradio prise Jack pour Pioneer, Sony Alpine Clarion, fil Bleu-Jaune sur JVC et Kenwood...



3- Connecter le connecteur à 14 voies à la centrale de commande au volant.



4- Enfin connecter le la commande au volant au faisceau du véhicule.





Track +/-

Source

Vol +/-

Source

Preset



Track +

Volume +

Volume -

Track -