


BMW 1 Series 2004 - 2011


CBI-8		
dip-switch positions	 7	 1



wires CAN-bus interface		
Power <i>Picture 1</i>	red	Connect to RED/GREEN wire pos.1 of the 54 pins WHITE connector linked to the WHITE central unit, located behind the kickwell on the passenger side.
	black	Connect to BROWN wire pos. 4 of the 54 pins WHITE connector linked to the WHITE central unit, located behind the kickwell on the passenger side.
CAN-bus <i>Picture 1</i>	white/brown	Connect to GREEN wire pos. 33 of the 54 pins WHITE connector linked to the WHITE central unit, located behind the kickwell on the passenger side.
	white/green	Connect to GREEN/ORANGE wire pos. 34 of the 54 pins WHITE connector linked to the WHITE central unit, located behind the kickwell on the passenger side.

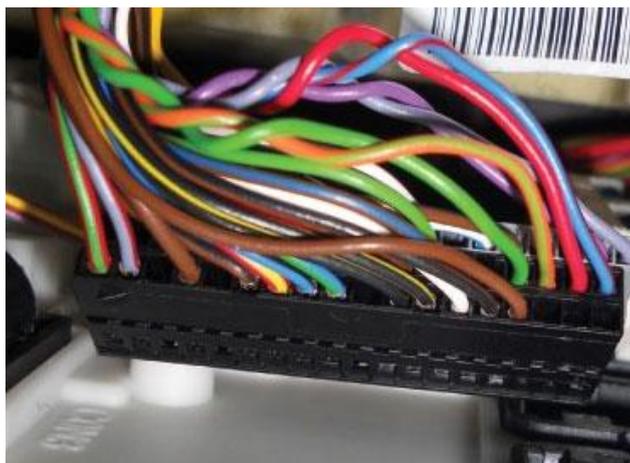

Picture 1

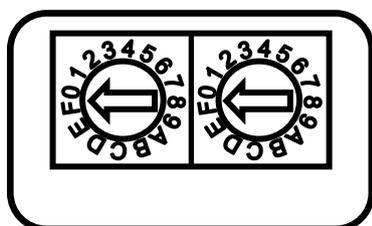

Side view CBI-8

CAN-bus wires CBI-8	
INPUT	OUTPUT
red = +30 (+12V)	black/green = +15
black = -30 ground	black/yellow = speed signal
white/green = Can high	black/red = RPM signal
white/brown = Can low	blue = driver's door
	white = back-up Light
	brown = not used