

BMW 3 Series 2004 →


CBI-8	
dip-switch positions	 7  0



wires CAN-bus interface		
Power <i>Picture 1</i>	red	Connect to RED wire pos.21 of the 41 pins connector of the WHITE central unit, located under the dashboard, driver side.
	black	Connect to the original ground node behind the kick panel on the driver side.
CAN-bus <i>Picture 1</i>	white/brown	Connect to GREEN wire pos. 26 of the 41 pins connector of the WHITE central unit, located under the dashboard, driver side.
	white/green	Connect to GREEN/ORANGE wire pos. 35 of the 41 pins connector of the WHITE central unit, located under the dashboard, driver side.



Picture 1

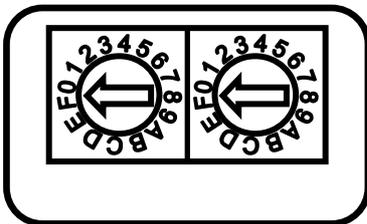

Side view CBI-8

CAN-bus wires CBI-8	
INPUT	OUTPUT
red = +30 (+12V)	black/green = +15
black = -30 ground	black/yellow = speed signal
white/green = Can high	black/red = RPM signal
white/brown = Can low	blue = driver's door
	white = back-up Light
	brown = not used