

BMW X5 Series 2007 IK →


CBI-8		
dip-switch positions		7
		0



wires CAN-bus interface		
Power <i>Picture 1</i>	red	Connect to RED/PURPLE wire pos.21 of the 41 pins connector of the CAS central unit, located at the left of the steering loom.
	black	Connect to the original ground node behind the kick panel on the driver side.
CAN-bus <i>Picture 1</i>	white/brown	Connect to GREEN wire pos. 26 of the 41 pins connector of the CAS central unit, located at the left of the steering loom.
	white/green	Connect to ORANGE/GREEN wire pos. 35 of the 41 pins connector of the CAS central unit, located at the left of the steering loom.



Picture 1

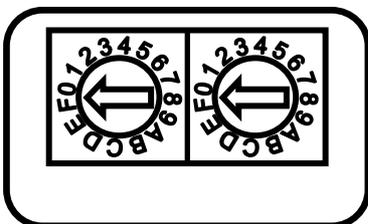

Side view CBI-8

CAN-bus wires CBI-8	
INPUT	OUTPUT
red = +30 (+12V)	black/green = +15
black = -30 ground	black/yellow = speed signal
white/green = Can high	black/red = RPM signal
white/brown = Can low	blue = driver's door
	white = back-up Light
	brown = not used