

ISTRUZIONI DI MONTAGGIO

FITTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE
 MONTAGEANLEITUNG
 INSTRUCCIONES DE MONTAJE

DISPOSITIVO DI TRAINO TIPO TOWING BRACKET TYPE DISPOSITIF DE REMORQUAGE TYPE ANHAENGEVORRICHTUNG TYP DISPOSITIVO DE CAREO TIPO	06032/VM
---	-----------------

PER AUTOVEICOLI FOR CARS POUR AUTOS FÜR KRAFTFAHRZEUGE PARA AUTOVEHICULO	BMW X3	
TYPE	X3	2010 →
CLASSE E TIPO DI ATTACCO CLASS AND HITCH TYPE CLASSE ET TYPE DE CROCHET KLASSE UND BEFESTIGUNGSART CLASES DE ACOPLAMIENTO	OMOLOGAZIONE HOMOLOGATION HOMOLOGATION ZULASSUNG APROBACION	CARICO VERTICALE MAX S VALUE MASSE VERTICALE MAXIMUM ZUL. STUETZLAST CARGA MAX. VERTICAL
F	e3 00 – 7603 (DIR. 94/20/CE)	S = kg 120
VALORE D D VALUE VALEUR D D WERT VALOR D	D = 12 kN	$D = \frac{\text{Max } \downarrow \text{Kg} \quad \text{Max } \downarrow \text{Kg}}{\text{Max } \downarrow \text{Kg} \quad \text{Max } \downarrow \text{Kg}} \times 0,00981 \leq 12 \text{ kN}$

COPPIA DI SERRAGGIO PER VITI (8.8): TORQUE SETTINGS FOR NUTS AND BOLTS (8.8): COUPLE DE SERRAGE POUR VIS (8.8): SCHRAUBENANZUGSMOMENT (8.8): MOM. DE PRESION PARA TORNILLOS Y TUERCAS (8.8):	M6 = 10 Nm M8 = 25 Nm M10 = 55 Nm M12 = 85 Nm M14 = 135 Nm M16 = 200 Nm
---	--

SAFETY INSTRUCTIONS

- Make sure that the towbar is suitable for the vehicle before starting the installation.
- For safety, all work involving towbar installation (incl. electrical components) must be undertaken by skilled technicians.
- Damaged components must be replaced with manufacturer's spares and fitted by qualified staff.
- It is forbidden to make any modification or structural repair to towing assembly.
- The towball must be kept clean and lubricated. For added safety, its diameter (50 mm) must be checked at regular intervals. If the towball measures less than 49 mm after selected readings across the diameter, the towball must be replaced with a new one.
- After 1000 km of towing, check torque settings for nuts and bolts, in accordance with the table.
- Umbra Rimorchi cannot be held responsible for any defects in the product caused by fault or by any injudicious use whatever of the user or a person he is liable for.

FITTING INSTRUCTIONS

06032/VM BMW X3


Remove any mastic from contact points then paint with anti-rust paint.

- 1) Remove lights, bumper and plastic casing under the underbody.
- 2) Remove the bumper beam and the tape on the rear part.
- 3) Re-fit the tape on the holes of the chassis rails.
- 4) Locate cross bar A using holes 01. Refit the bumper beam and tighten the original bolts.
- 5) Tighten all the bolts and nuts according to the recommended torque settings.
- 6) Connect the wirings to the socket.
- 7) Cut the plastic casing as shown.
- 8) Re-fit bumper, plastic casing under the underbody and the rear lights.

ITEM N.06032/VM

01) Nr. 4 / NUT M12 (ORIGINALS)

02) BOLTS AND NUTS M12 – SPACERS AS REQUIRED


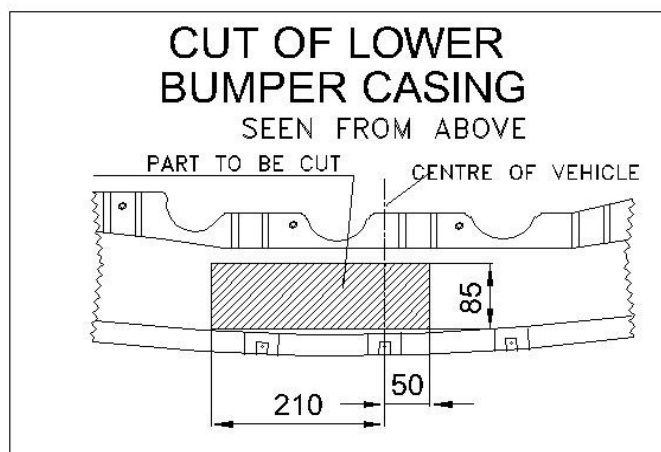


ACS type 3011
Appr. Nr. e4 00-2164
Appr. Nr. e4 00-2608
Appr. Nr. e4 00-2932


ACS type 6011
Appr. Nr. e4 00-3957

TERWA type 30690
Appr. Nr. e4 00-3919

- 1) Nr.2 SCREW M12x30 – CONTACT
- 2) Nr.2 SCREW M12x25 – CONTACT

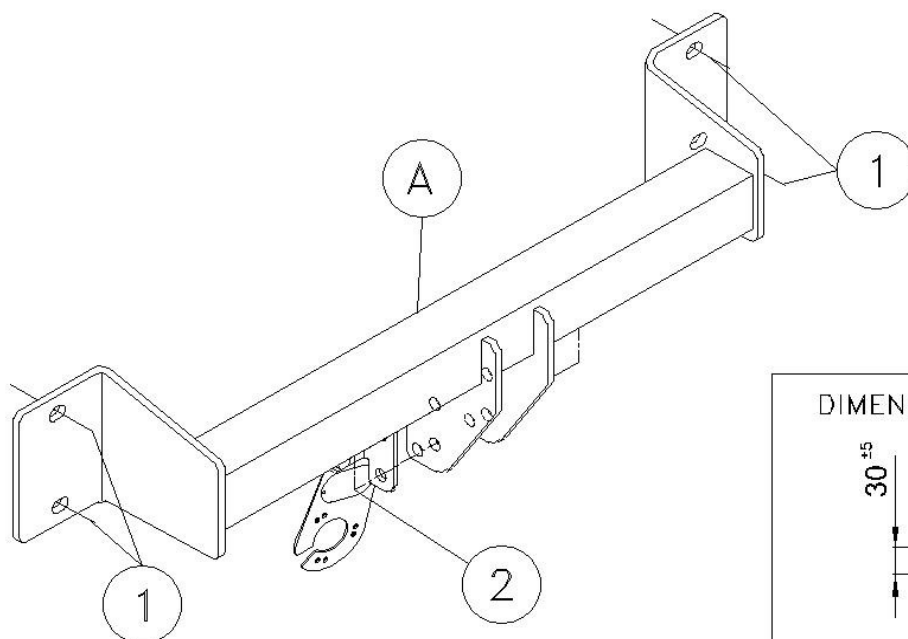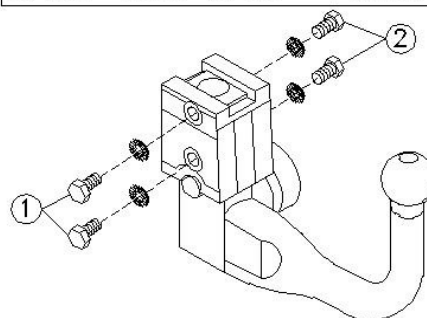


DIMENSIONS: "e" , "f"

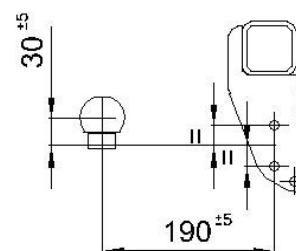

REV.00

- D** Der Freiraum nach Anhang VII, Abbildung 30 der Richtlinie 94/20/EG ist zu gewährleisten.
- CZ** Volný prostor ve smyslu Přílohy VII, obr. 30 Směrnice č. 94/20/EG musí být zaručen.
- DK** Frirommet skal overholdes iht. bilag VII, fig. 30 i direktiv 94/20/EF.
- E** Debe garantizarse el espacio libre, conforme al anexo VII, imagen 30 de la directiva comunitaria 94/20/CE.
- F** L'espace libre doit être garanti conformément à l'annexe VII, illustration 30 de la directive 94/20/CE.
- FIN** Liitteen VII, direktiivin 94/20/EY kuvan 30 mukainen vapaatila on taattava.
- GB** The clearance specified in appendix VII, diagram 30 of guideline 94/20/EC must be guaranteed.
- GR** Πρέπει να εξασφαλίζεται ο ελεύθερος χώρος σύμφωνα με το Παράρτημα VII, εικόνα 30 της Οδηγίας 94/20/ΕΚ.
- I** Deve essere garantito lo spazio libero secondo l'allegato VII, figura 30 della direttiva 94/20/CE.
- N** Frirommet etter tillegg VII, figur 30 i direktiv 94/20/EØF skal overholdes.
- NL** De tussenruimte volgens aanhangsel VII, afbeelding 30 van de richtlijn 94/20/EG moet in acht worden genomen.
- PL** Zagwarantować swobodną przestrzeń zgodnie z załącznikiem VII, rysunek 30 dyrektywy 94/20/CE.
- S** Glappet enligt bilaga VII, bild 30 i direktiv 94/20/EG ska garanteras.

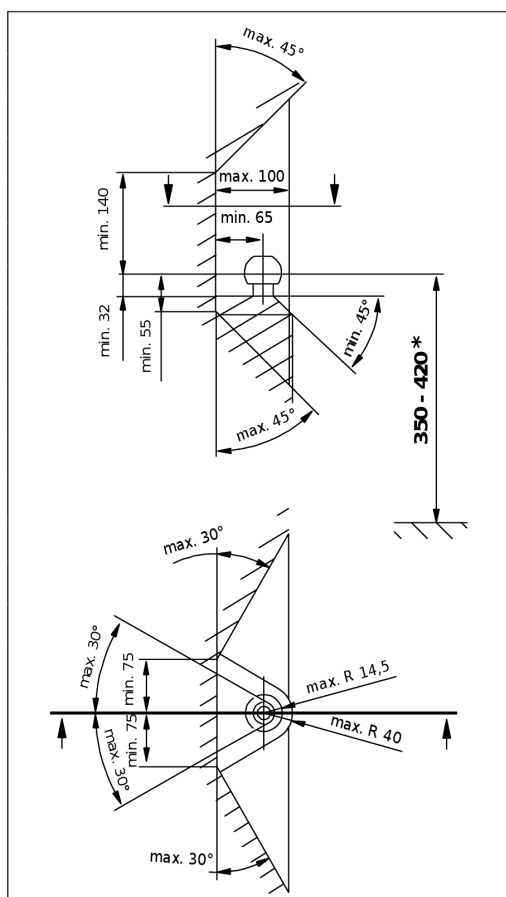

- D** * bei zulässigem Gesamtgewicht des Fahrzeuges
- CZ** * při celkové přípustné hmotnosti vozidla
- DK** * ved tilladt totalvægt for køretøjet
- E** * con peso total autorizado del vehículo
- F** * pour poids total en charge autorisé du véhicule
- FIN** * Ajoneuvon suurimmalla sallitulla kokonaispainolla
- GB** * at gross vehicle weight rating
- GR** * για το επιτρεπτό μικτό βάρος του οχήματος
- I** * per il peso complessivo ammesso del veicolo
- N** * ved kjøretøyets tillatte totalvekt
- NL** * bij toegestaan totaal gewicht van het voertuig
- PL** * przy dopuszczalnym ciężarze całkowitym pojazdu
- S** * vid fordonets tillåtna totalvikt