


TOYOTA RAV-4 2001→2005


Toyota Rav-4 2001-2005

1. Undip and remove side panel from both sides of radio and climate controls. (Figure A)
2. Remove (4) Phillips screws securing the radio/climate control trim panel. (Figure B)
3. Remove (4) 10mm bolts securing the radio. (Figure C)
4. Unplug and remove radio.
5. Remove factory brackets from radio. Retain brackets for use during kit assembly.


Continue to Kit Preparation

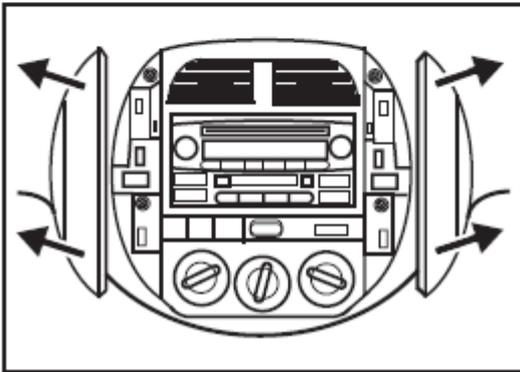

(Figure A)

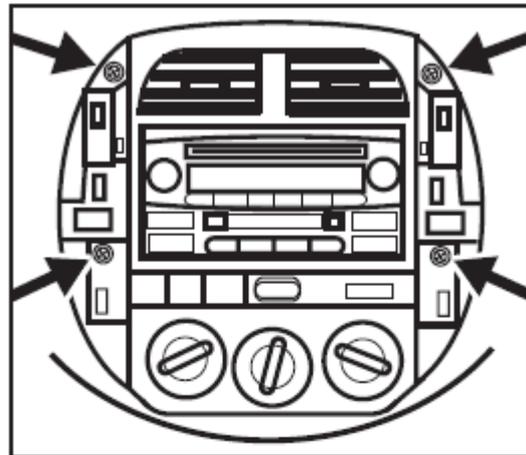

(Figure B)

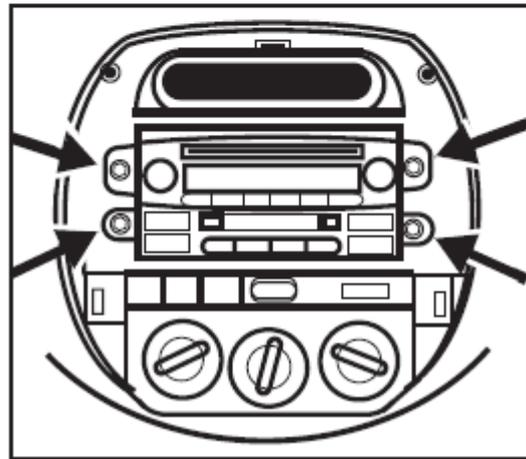


(Figure C)


For the Toyota Rav-4 2001-2005, Toyota Highlander 2001-2007 (without factory navigation), Toyota Tundra 2003-2006 and Toyota Sequoia 2003-2007:

Cut off the rear section of the ISO DDIN trim plate brackets, as shown by the dotted lines labeled "B" in. (Figure A)

Continue to Kit Assembly

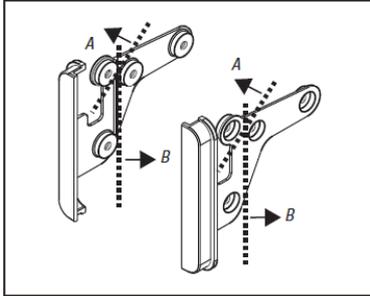

(Figure A)

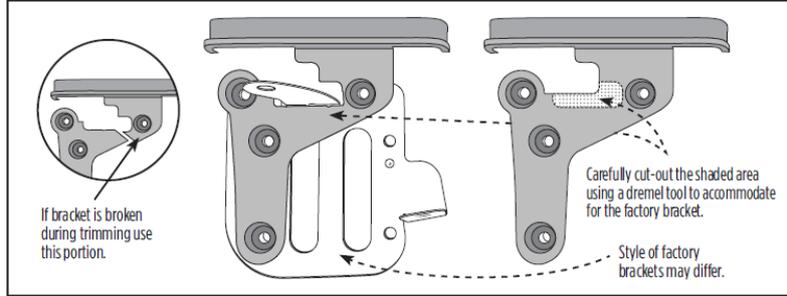

(Figure B)

ISO DDIN radio provision

1. If applicable, remove the trim ring from the aftermarket radio.
2. Attach the factory mounting brackets and the ISO DDIN trim plate brackets to the radio with the screws supplied with the radio.

Note: Remove locating pins from factory brackets using a grinder tool.

3. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Test the radio for proper operation.
4. Reassemble the dash in reverse order of disassembly.

