




Smart ForTwo 2007 - 2010
Smart ForFour 2004 - 2006

Compatible with double DIN devices

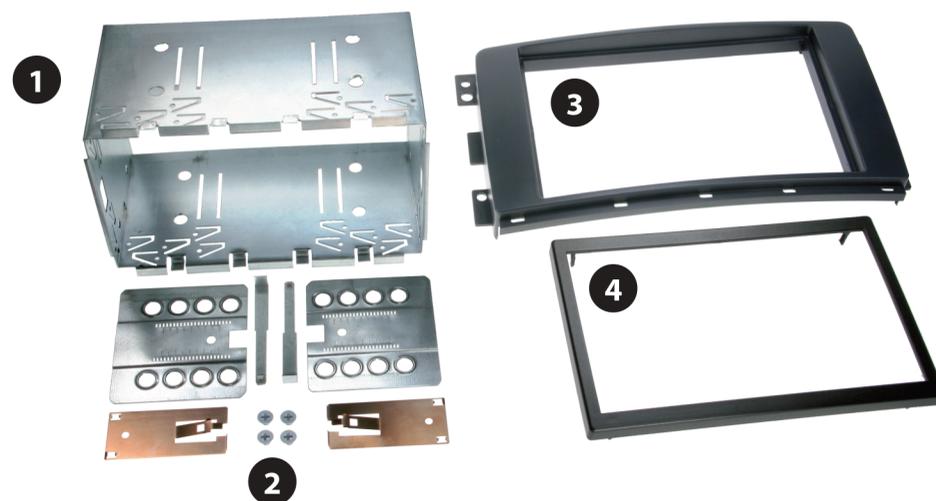


Double DIN Set contents


- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate
- (4) Trim Frame



1. Smart Fortwo with radio preparation (pocket) or OEM head unit

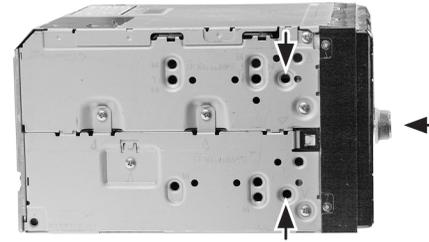

(sample photo)

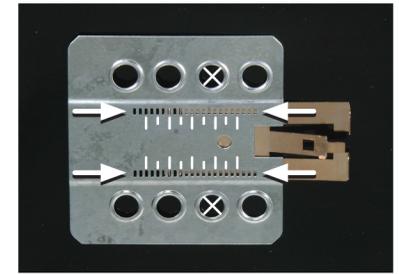


(sample photo)



2. Remove the switch unit (fixed by clamps) by pulling it towards you

Mount the metal brackets to the double DIN head unit.

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)

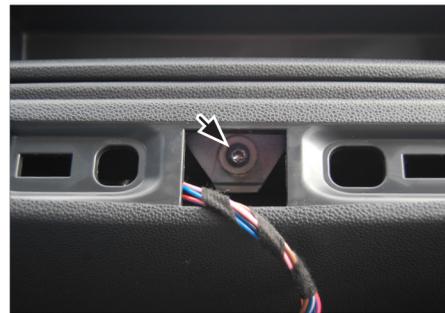

3. Remove the TORX TX25 screw holding the surrounding frame (see arrow)



5. Push the Double DIN head unit into the metal frame, push both into the mounting frame and press the facia plate onto the mounting frame, until it snaps in.

Connect all required circuit points and place the Double DIN head unit on the dash board



4. Remove surrounding frame (fixed by clamps) - by pulling it towards you

Remove the 4 screws (see arrows) pull out the pocket / OEM head unit



Fix the Double DIN head unit with the 4 original screws (see arrows)

6. Reinstall everything in reverse order to finish installation