


Installation manual for:

Toyota Avensis 2004-->

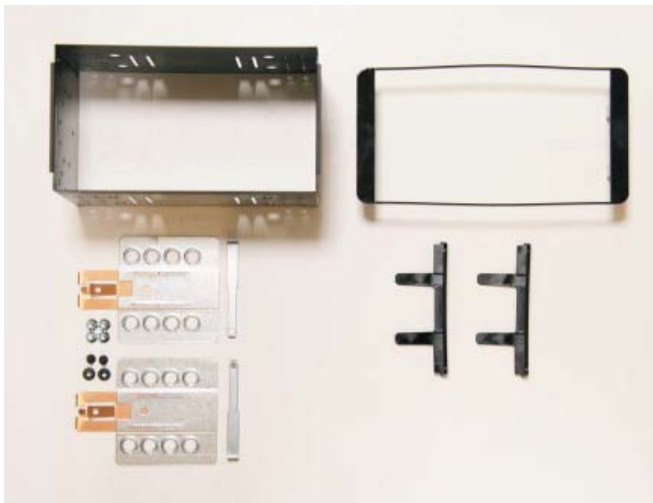

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1x Replacement panel for non motorized screen
- * 2X Replacement panel for motorized screen
- * 2X Mounting plates
- * 2X Mounting spaces
- * 2X Radio keys
- * 4X Screws




You need
OEM Bezel
Part Number : 55405-05160



Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

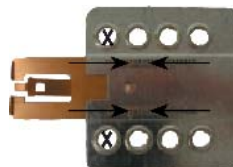

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

* Mount the plates.

2-DIN 12.301300-06

Toyota Avensis 2004 -->



1 Remove the dashboardpanels around the radio at the location of the arrows.




2 Remove the frame above the radio by using a plastic wedge at the location of the arrows.



3 Remove the original radio at the location of the arrows. The radio is tighten by four screws.



4

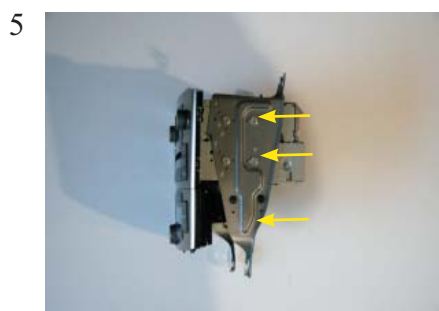

5

Remove the original OEM metal brackets from the radio and the climate control unit. This is tighten by twelve screws.



6

Remove the original radio from the climate control. Slide the climate control unit to the right.



7

Place the new metal bracket and the climate control unit between the OEM radio brackets. Tighten the climate control with the four original screws.



8

Place the OEM replacement panel on the climate control unit by sliding it to the left .



9

Place the OEM replacement panel with the climate control unit and the metal bracket into the dashboard.



10

Place the new headunit.




11

Place the radio trim and replace all dashboardpanels in reverse order.

Installation manual for:

Toyota Auris

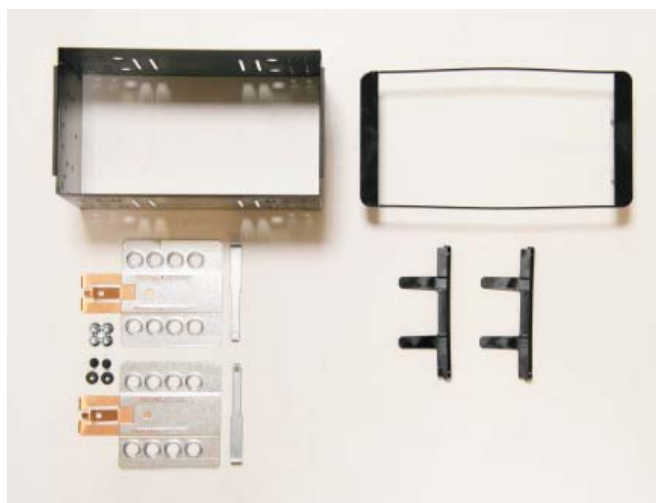

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1x Replacement panel for non motorized screen
- * 2X Replacement panel for motorized screen
- * 2X Mounting plates
- * 2X Mounting spaces
- * 2X Radio keys
- * 4X Screws




You need
OEM Bezel
Part Number :
55405-12A00 metal bronze
55405-02130 black



Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

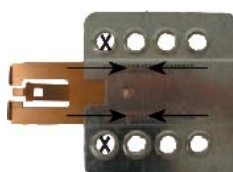

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

* Mount the plates.




Remove the dashboardpanels around the radio at the location of the arrows.



Remove the top air shaft by pulling it forwards.



Remove the original radio at the location of the arrows this is tighten by four screws.

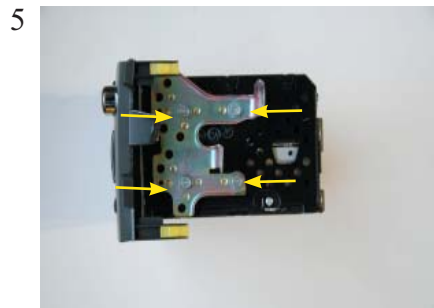

Remove the original OEM metal brackets from the radio.This is tighten by eight screws.



Place the OEM radio brackets on the metal bracket for the new headunit. This will fit in the holes of the metal bracket(if needed mount it with screws).



Place the metal bracket into the dashboard between the metal OEM brackets.



Place the new headunit




Place the OEM replacement panel.



Place the radio trim and place all dashboard panels in reverse order.

Installation manual for:

Toyota Corolla Verso

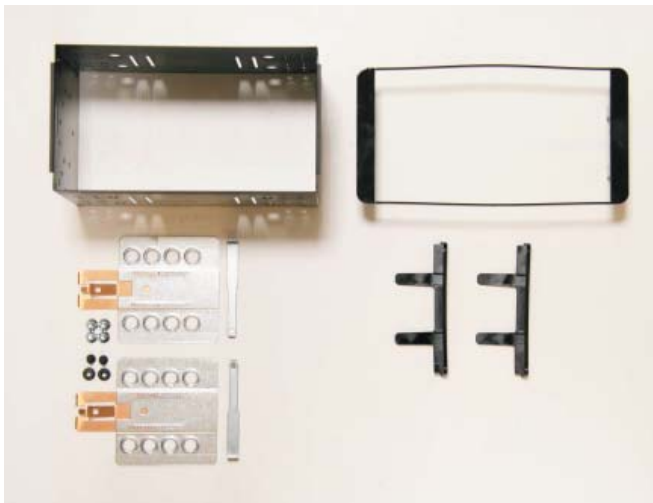

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1x Replacement panel for non motorized screen
- * 2X Replacement panel for motorized screen
- * 2X Mounting plates
- * 2X Mounting spaces
- * 2X Radio keys
- * 4X Screws




You need
OEM Bezel
Part Number : 55417-0F010



Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

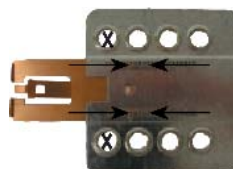

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

* Mount the plates.

2-DIN 12.301300-06

Toyota Corolla Verso




Remove the air shafts at the left and the right side of the OEM radio by using a plastic wedge.



Remove the climate control unit. This is tightened by two screws and pull the unit forwards.



Remove the original radio by removing the four screws at the location of the arrows.

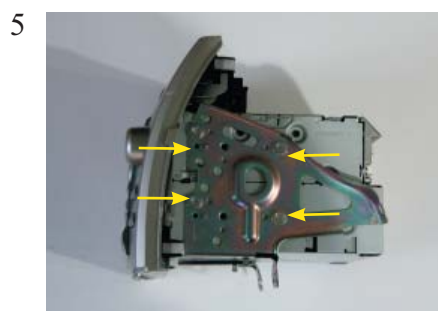

Remove the original OEM metal brackets from the radio. This is tightened by four screws



Place the OEM metal brackets on the metal bracket of the new headunit. This will fit into the holes of the metal bracket (if needed mount it with screws).



Place the metal bracket into the dashboard between the metal OEM brackets.



Remove the warning lights switch unit from the original panel and place it in the replacement panel.



Place the new headunit.




Place the new OEM replacement panel.



Place the radio trim and replace all dashboard panels in reverse order.

Installation manual for:

Toyota Corolla 2008-->

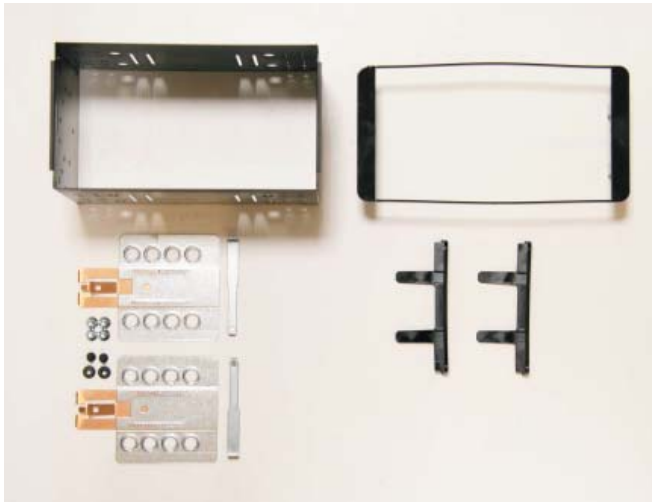

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1x Replacement panel for non motorized screen
- * 2X Replacement panel for motorized screen
- * 2X Mounting plates
- * 2X Mounting spaces
- * 2X Radio keys
- * 4X Screws




You need
OEM Bezel
Part Number : 55406-12A71



Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

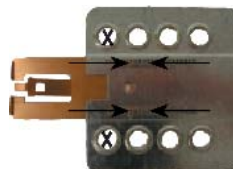

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

* Mount the plates.

2-DIN 12.301300-06

Toyota Corolla 2008 -->




Remove the dashboardpanels around the radio at the location of the arrows.



Remove the top air shaft by pulling it forwards.



Remove the original radio this is tighten by four screws.

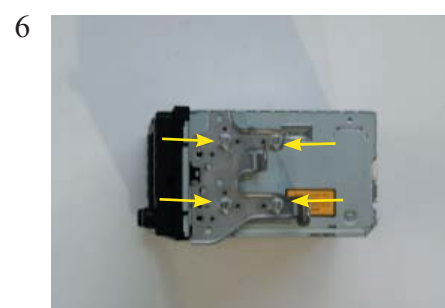

Remove the OEM brackets from the original radio.This is tighten by eight screws.



Place the OEM radio brackets on the metal bracket of the new headunit. This will fit in the holes of the metal bracket(if needed mount it with screws).



Place the metal bracket into the dashboard between the metal OEM brackets.



Place the OEM replacement panel.




Place the new headunit and replace the dashboard panels in reverse order.



Place the radio trim and replace all dashboardpanels in reverse order.

Installation manual for:

Toyota Yaris 2005-->

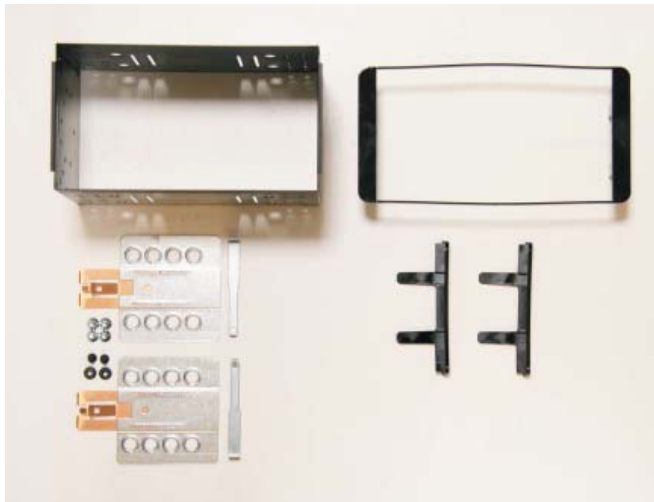

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1x Replacement panel for non motorized screen
- * 2X Replacement panel for motorized screen
- * 2X Mounting plates
- * 2X Mounting spaces
- * 2X Radio keys
- * 4X Screws



You need OEM bezel
Part Number : 55405-0D260-B0




You need OEM bezel
Part Number: 55436-52010-B0 left
55435-52010-B0 Right



Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

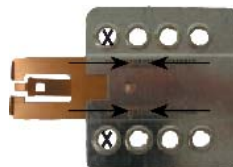

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

* Mount the plates.

2-DIN 12.301300-06

Toyota Yaris 2005-->




Remove the dashboard panels around the radio at the location of the arrows.



Lift up the panel above the air shafts at the location of the arrows by using a plastic wedge.



Remove the OEM radio at the location of the arrows. The radio is tightened by four screws.

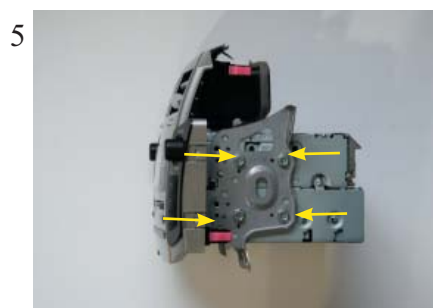

Remove the original OEM metal brackets from the radio. This is tightened by eight screws.



Place the OEM radio brackets on the metal bracket of the new headunit. This will fit in the holes of the metal bracket (if needed mount it with screws).



Place the metal bracket into the dashboard between the metal OEM brackets.



Remove the air shafts from the original radio and replace them in the OEM replacement panel.



Place the OEM replacement panel.



You need the OEM side dashboard panels for placing the new headunit.



Place the new headunit and the side panels



Place the radio trim.