Installation Manual

2782A

2-DIN 381190-42-1 2-DIN with pocket 281190-42-1 2-DIN with Inbay-pocket 241190-42-1

Mercedes C-Class (W203) 05/2000 - 03/2004

Mercedes C-Class T-Model (S203) 01/2001 - 03/2004

Mercedes C-Class Coupé (CL203) 10/2000 - 03/2004


Mercedes CLK (C209) 06/2002 - 03/2004

Mercedes CLK (A209) Cabriolet 02/2003 - 03/2004

Mercedes Vito/Viano (W639/V639) 10/2003 - 03/2006

Compatible with double DIN devices

Double DIN Navigation

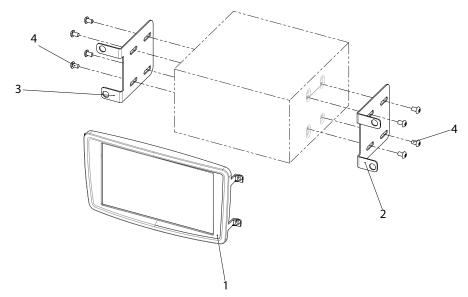

Double DIN Set contents

- (1) Facia Plate
- (2) Mounting Bracket left
- (3) Mounting Bracket right
- (4) Flat Headed Screw




Unclip the air vent unit carefully on both sides with a screw driver.

6. Pull up the air vent and remove the 2 screws (left and right) which become visible.



Pull down the air vent and unclip the whole unit at both sides carefully with a screw driver.

Remove the air vent unit.

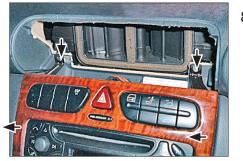

8. Remove screws on top of center panel

Remove center panel by pulling it towards your direction



 Remove four Torx screws (2 on each side) holding the OEM head unit.

Unplug all cables carefully Remove OEM head unit.




11. Connect all required circuit points. Place head unit in dash board


Place facia plate and fix it with the OEM screws (see step 9)

Reinstall everything in reverse order to finish installation

10. 2-DIN head unit install

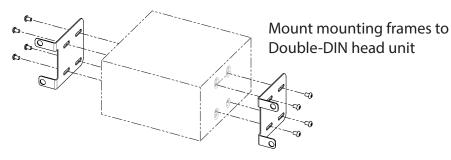

1-DIN head unit install

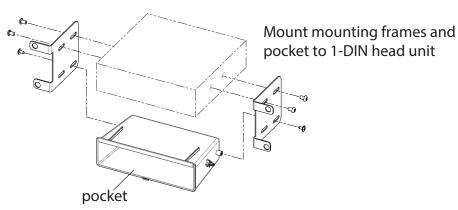

All installation work must be performed by a qualified professional installer only.

The manufacturer / dealer is not liable for any kind of incidential or indirect damages.