




## Installation Manual

color	part-no.
black	381320-10
piano black	381320-10-2
rubber-touch	391320-10

- VW Caddy (Typ 2K)
- VW Eos
- VW Golf V / VW Golf Plus
- VW Golf VI 2008->
- VW Jetta 2003-2008

- VW Passat (Typ 3C) / VW Passat CC
- VW Polo 2010->
- VW Scirocco III 2008->
- VW Tiguan / VW Touran

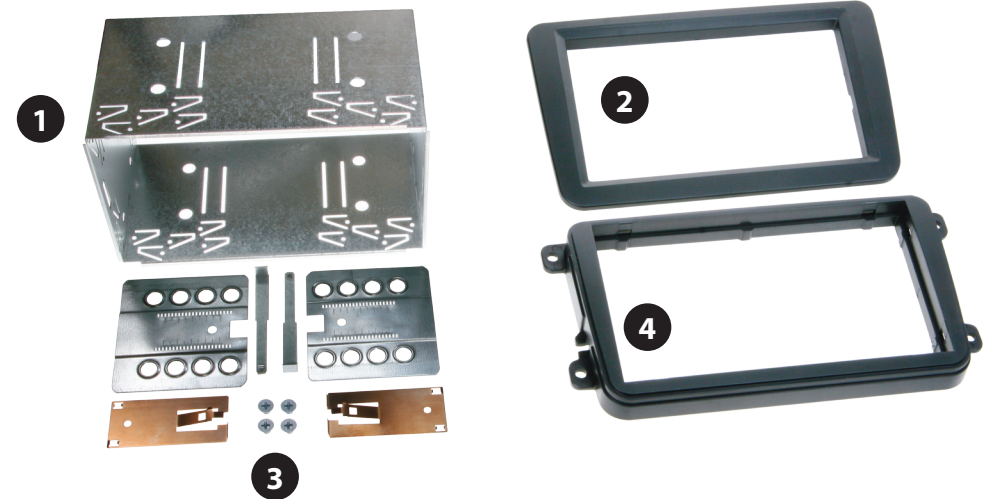

- (1) Metal Frame
- (2) Radioblende


- (3) Installation Kit
- (4) Mounting Frame

Auto-Communications-Vertriebs GmbH · Straßburger Allee 10-12 · D-41812 Erkelenz  
Tel.: +49 2431 9645 - 0 · Fax: +49 2431 9645 - 55 · [www.acvgmbh.de](http://www.acvgmbh.de) · [info@acvgmbh.de](mailto:info@acvgmbh.de)




### VW Golf V only:

Pull up the aircone unit (fixed by clips). Remove two Torx (TX20) screws (see arrows) which become visible.

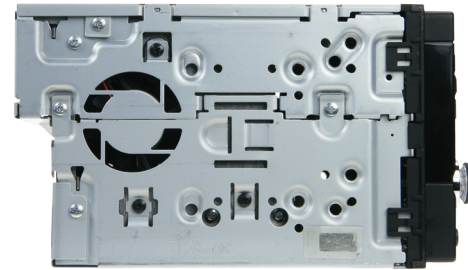

(sample photo)

Mount the metal brackets with double DIN head unit

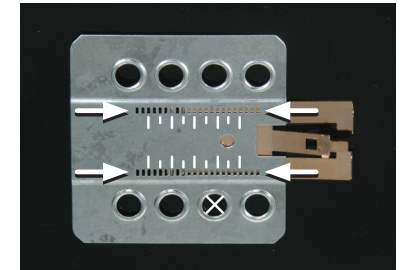


(sample photo)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



1. Remove the original trim frame, surrounding the radio (fixed by clips).

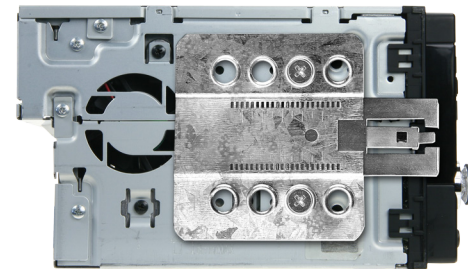

(sample photo)

3. Connect all required circuit points and push the double DIN head unit until it snaps in.



2. Remove the 4 Torx (TX20) screws (These screws will be used again later).

Remove the OEM head unit.



(sample photo)

4. Install everything in reverse Order to finish installation