




9. Unplug all cables of OEM head unit - and remove it

Vauxhall/Opel Mokka (J-A) 2012>


CT23VX40

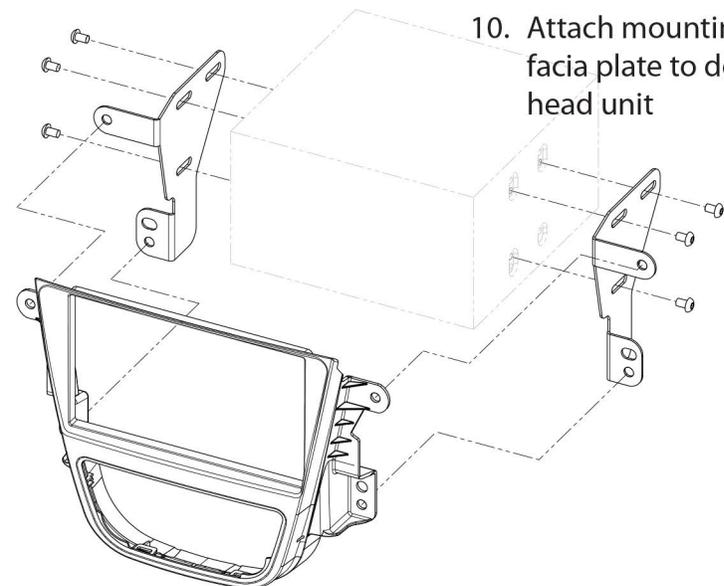

10. Attach mounting frames and fascia plate to double DIN head unit

Compatible with these double DIN devices

Double DIN Navigation

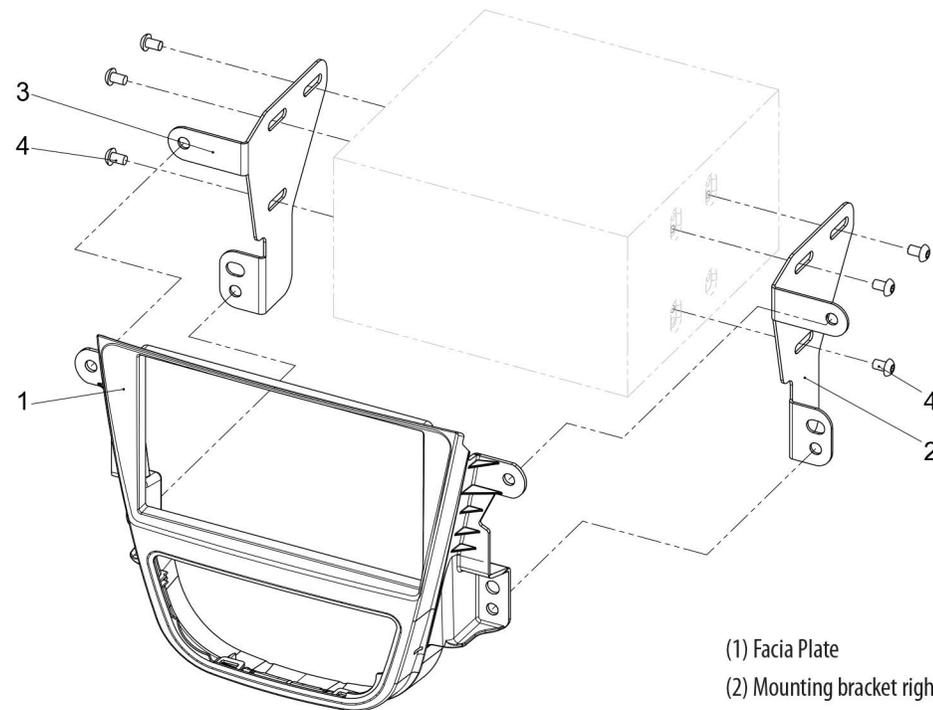

- (1) Fascia Plate
- (2) Mounting bracket right
- (3) Mounting bracket left
- (4) Flat headed screw



11. Connect all required circuit points

Fix double DIN head unit on dashboard

Reinstall everything in reverse order to finish installation

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*




1. Opel Mokka OEM dashboard



2. Unclip panel carefully (see arrows)




3. Pull panel towards your direction carefully

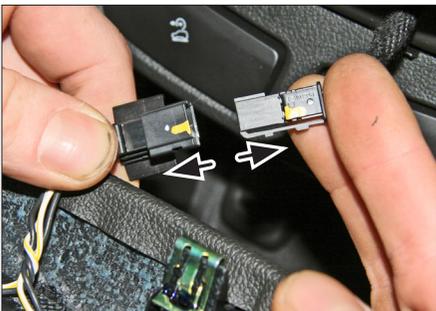

4. Unplug cable at the panel backside



5. Remove screws of OEM head unit

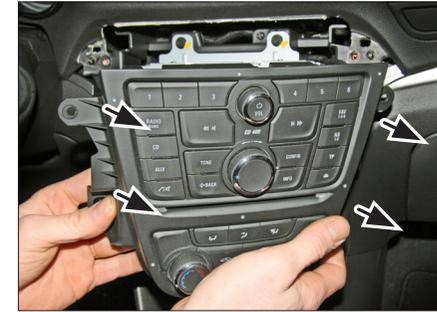

6. Pull OEM control unit towards your direction



7. Remove two plugs



8. Remove two screws on top Pull out OEM head towards your direction