


part-no.: CT23VX48  
colour: piano black

- Remove buttons from OEM panel and attach them to new facia plate

• Opel Adam (Type S-D) 01/2013 ->

Compatible with these navigation devices

## Double DIN Navigation

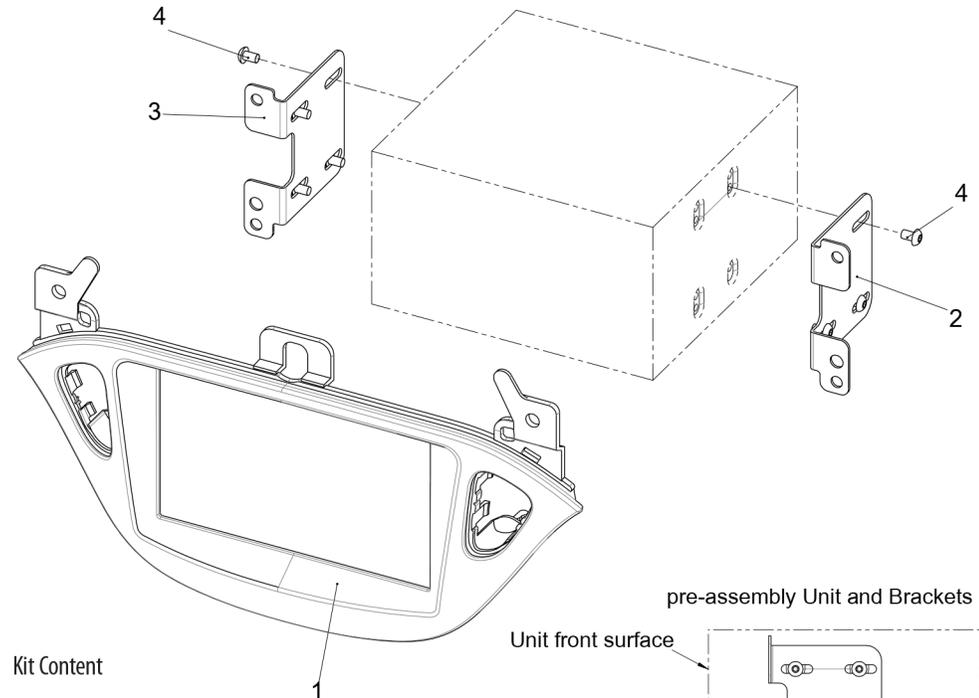

Kit Content

- Facia Plate
- Mounting bracket right
- Mounting bracket left
- Flat Headed Screw

pre-assembly Unit and Brackets

Unit front surface

~37mm

- Connect all cables  
Place facia plate on dash board

- Reinstall everything in reverse  
Order to finish installation





1. Opel Adam OEM dash board



2. Unclip and remove OEM panel



3. Unplug hazard light switch




4. Remove 2 screws of head unit cover



5. Unclip OEM cover carefully (see arrow)



6. Remove OEM cover (unplug all connectors carefully)

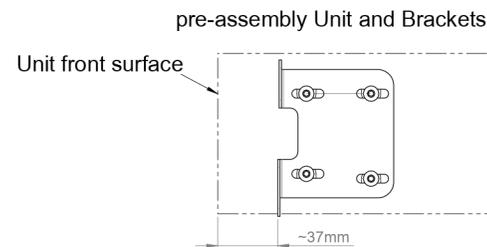

7. Attach mounting brackets to double DIN head unit



8. Connect all required circuit points Place Double DIN head unit on dash board

Fix double DIN head unit with 4 OEM screws