



1 Remove the dashboard panels around the radio at the location of the arrows.



3 Lift up the panel above the air shafts at the location of the arrows by using a plastic wedge.

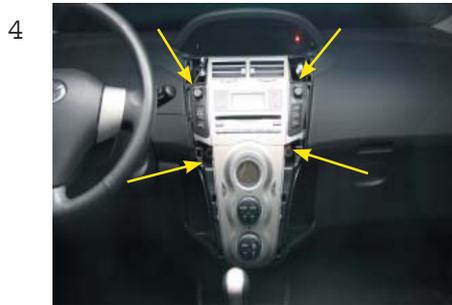

4 Remove the OEM radio at the location of the arrows. The radio is tightened by four screws.

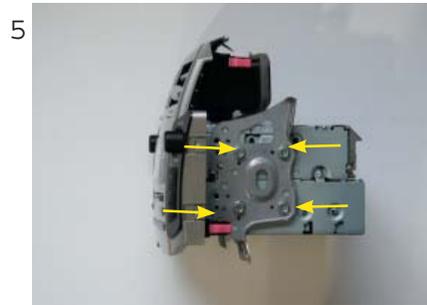

5 Remove the original OEM metal brackets from the radio. This is tightened by eight screws.



6 Place the OEM radio brackets on the metal bracket of the new headunit. This will fit in the holes of the metal bracket (if needed mount it with screws).




7 Place the metal bracket into the dashboard between the OEM brackets.



8 Remove the air shafts from the original radio and replace them in the OEM replacement panel.



9 Place the OEM replacement panel.

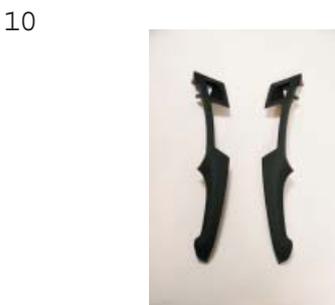

10 You need the OEM side dashboard panels for placing the new headunit.



11 Place the new headunit and the side panels.



12 Place the radio trim.