


2929

KIT 2 DIN FIAT DOBLO 2010> OPEL COMBO 2011>



ATTENTION non compatible avec les autoradios de format Double Iso

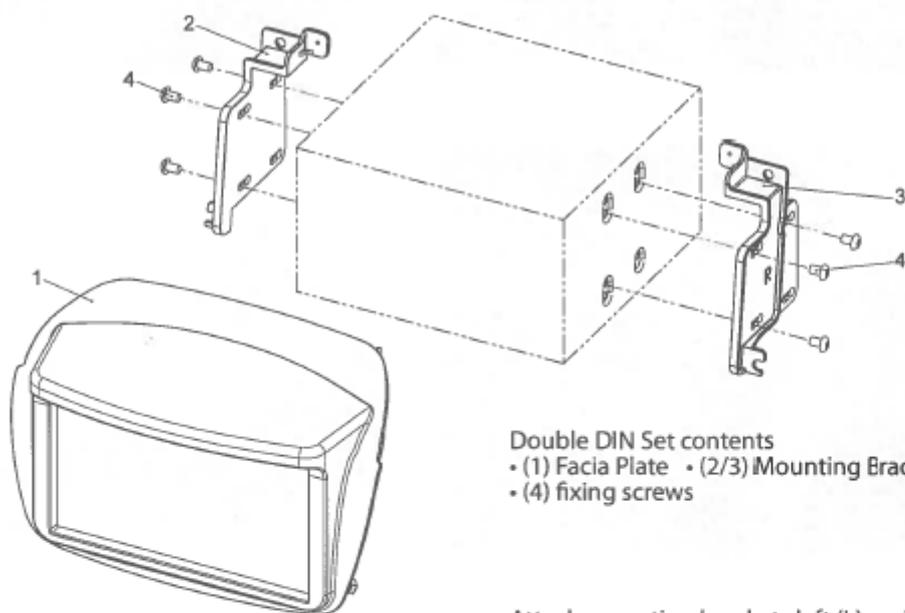

Double DIN Set contents


- (1) Facia Plate
- (2/3) Mounting Brackets
- (4) fixing screws

Attach mounting brackets left (L) and right (R) to Double DIN Navigation (use the first of three possible holes as shown on the photo below)

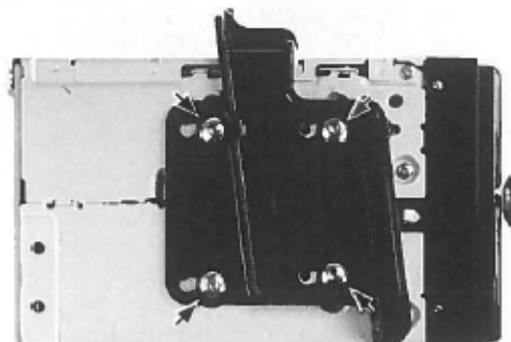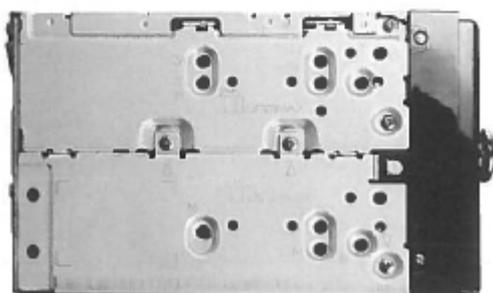

Installation Manual Double DIN Kit: Fiat Doblo 2010->


Please study the installation manual carefully, before you start. The installation requires some cutting works of the OEM-Panel. All OEM screws have to be reused again

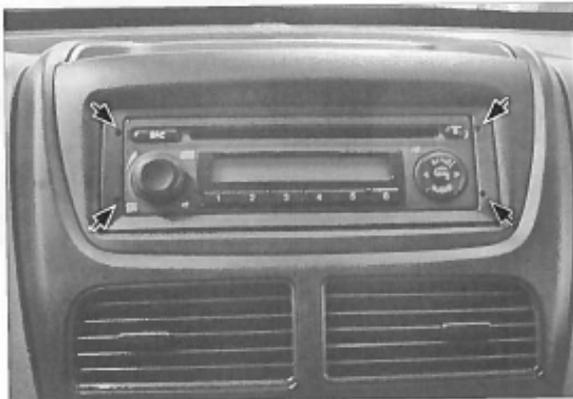

1. Remove OEM Radio with special radio release keys



2. Remove 2 screws (left and right)

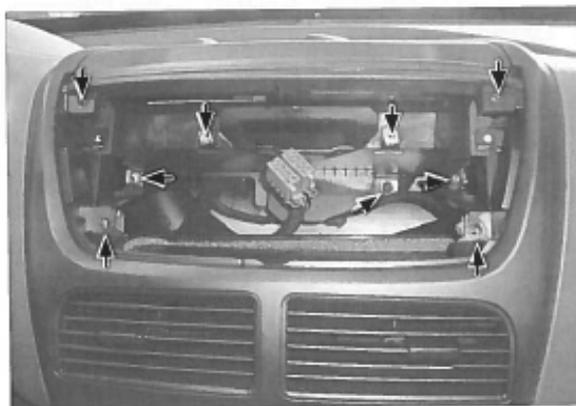

3. Remove screws holding center panel (see arrows)


Info: You have to reuse the screws later

Unclip center panel



Remove center panel

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*



4. Disassemble center panel (you have to reuse the screws later!)

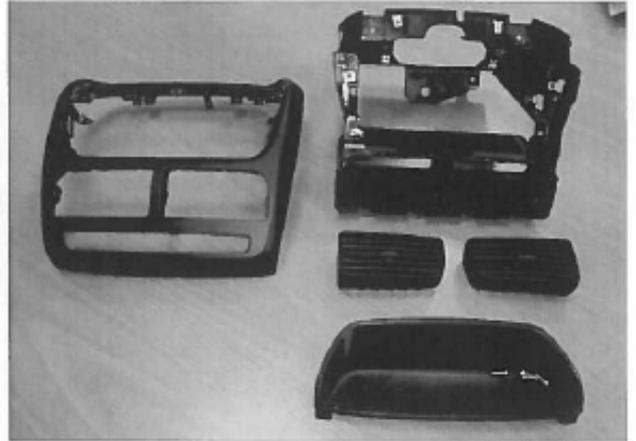


5. Cut upper part from center panel inlay (the upper part - see cross - won't be needed anymore)

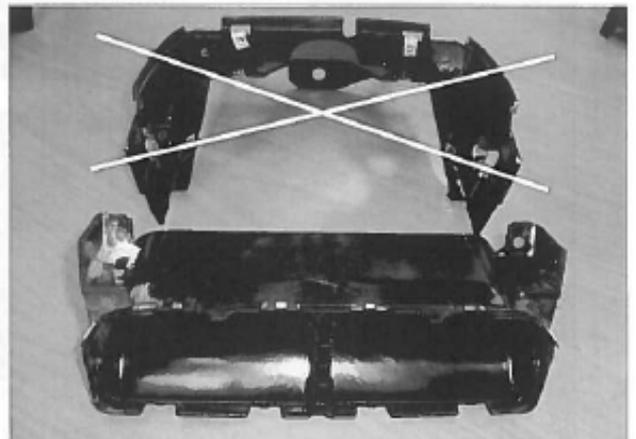
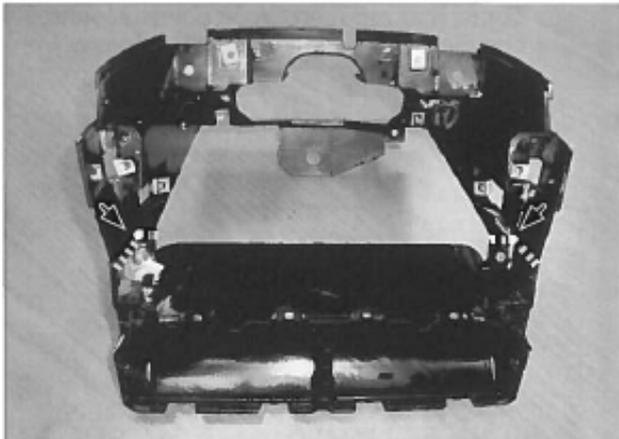


6. Cut this part at center console (see dashed line)

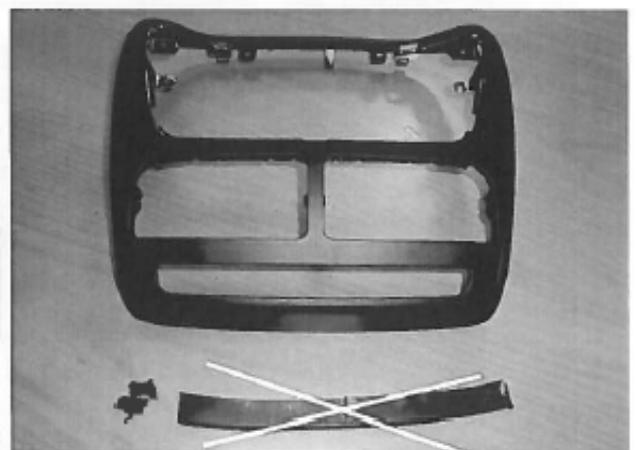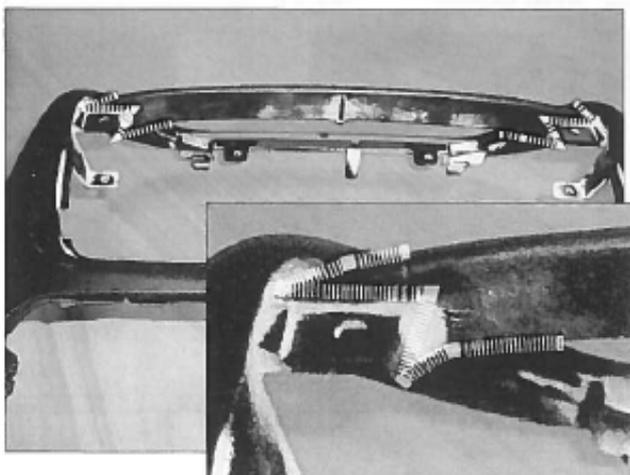

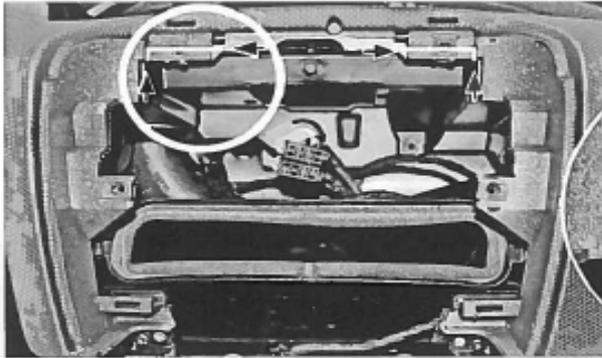

7. Cut plastic here (see arrows)

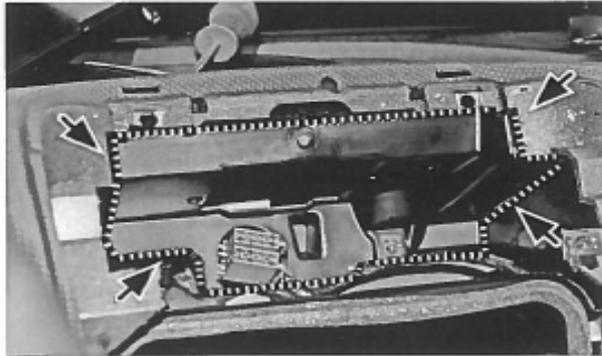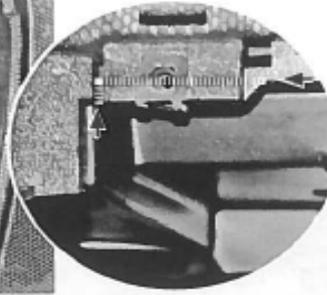


8. Cut plastic in order to clear space for double DIN head unit (see dashed line)

Assemble center panel
Mount Navigation to center panel

Important: On top, the mounting bracket has to be BEHIND the OEM frame with the screw-hole. On bottom the mounting bracket has to be in FRONT of the OEM frame. (see sample photos)

Connect all required circuit points. Mount complete center panel. Place facia plate

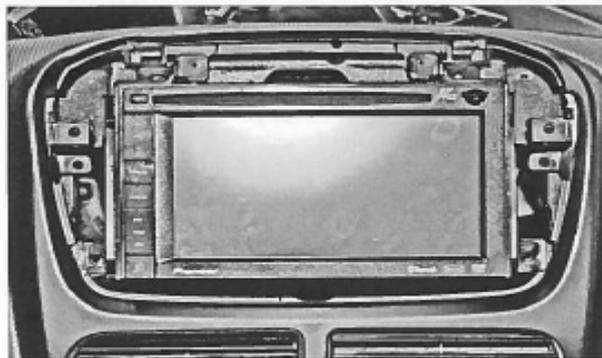

On Top: mounting bracket BEHIND screw hole of OEM frame. Fix with OEM screws



On bottom: mounting bracket in FRONT of screw hole of OEM frame. Fix with OEM screws

SILIM Parc de la Bandonnière - 9, rue Louis Gattefossé - 69800 SAINT-PRIEST

☎ : 04 78 20 93 97 - 📠 : 04 78 21 08 54 - ✉ : info@silim.com