

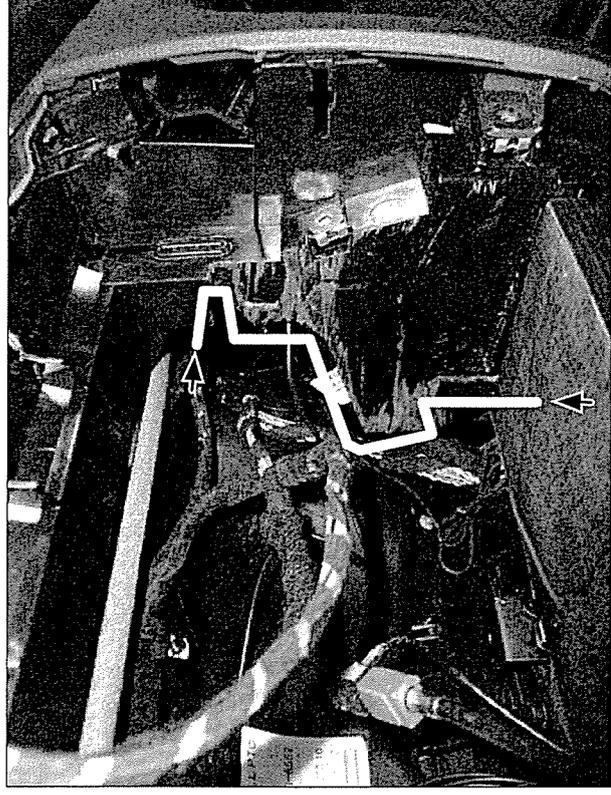



8. Remove out OEM head unit

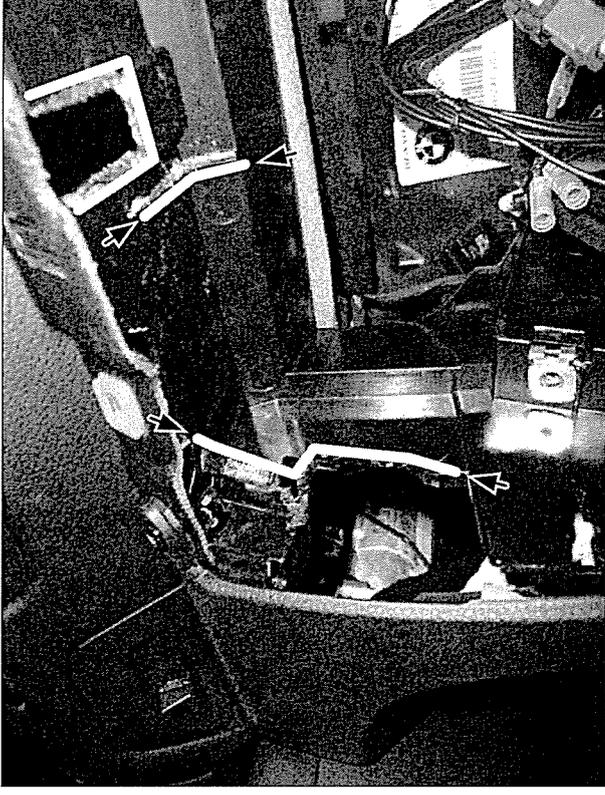


9. Cut away plastic to clear space for Double DIN head unit
(see sample images)

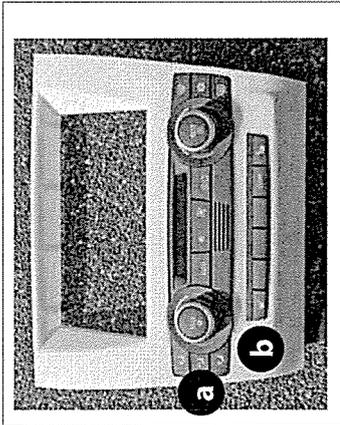

10. Attach air condition control unit (a) and switch bar (b) to replacement facia plate

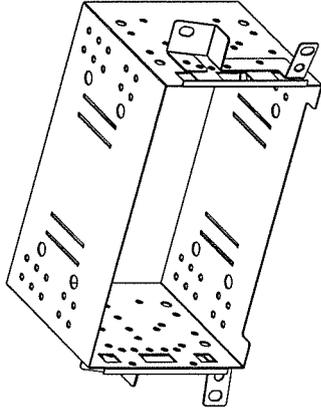

11. Set metal frame into dashboard and fix it with screws

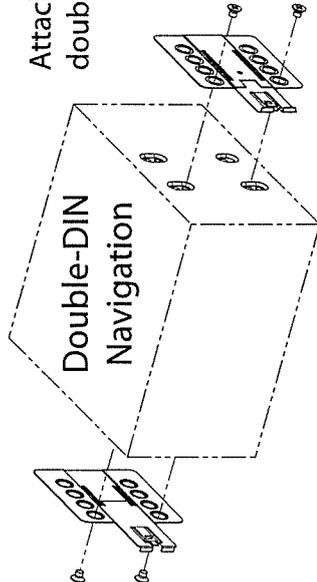


Attach mounting brackets to double DIN navigation




12. Connect all required circuit points
Push double DIN navigation into dash board - until it snaps in

Reinstall everything in reverse order to finish installation

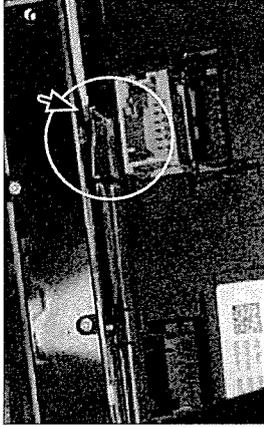


5. Unclip and remove switch panel below air condition control unit

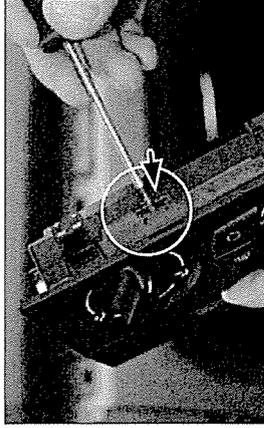

6. Unclip and remove air condition control unit




7. Remove screws below OEM head unit (see arrows)

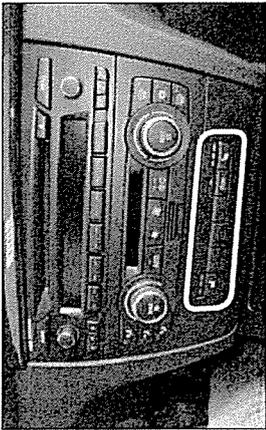


1. BMW 1 (E87) 03/2007 (facelift) with switch bar under the climate control unit

BMW without switch panel under climate control unit (see left)


- see note on page 7

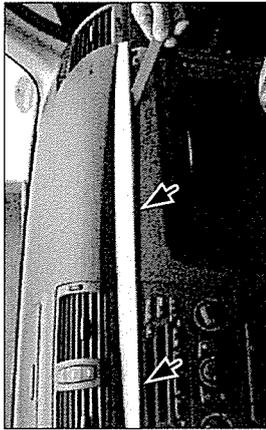

2. Unclip middle panel and remove it carefully

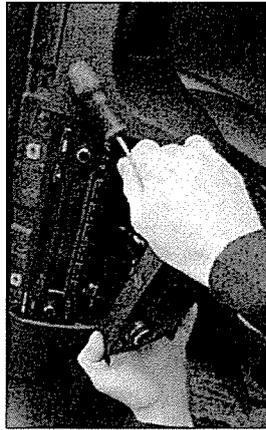


3. Unclip air condition control unit

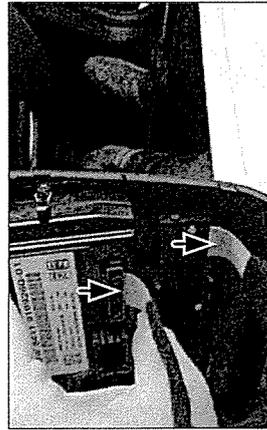

4. Pull out air condition control unit carefully

Remove pulgs (see arrows)

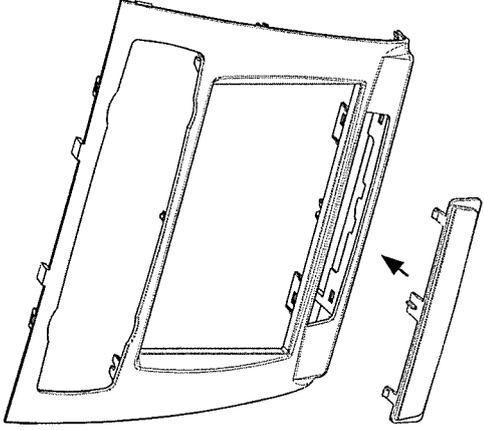

Note:

Only for BMW without switch panel under climate control unit:


Attach blanking cover to fascia plate (see arrow)



• **BMW 1 (E87) 03/2007-> (facelift)**

- ***with automatic air condition***

- ***without iDrive***

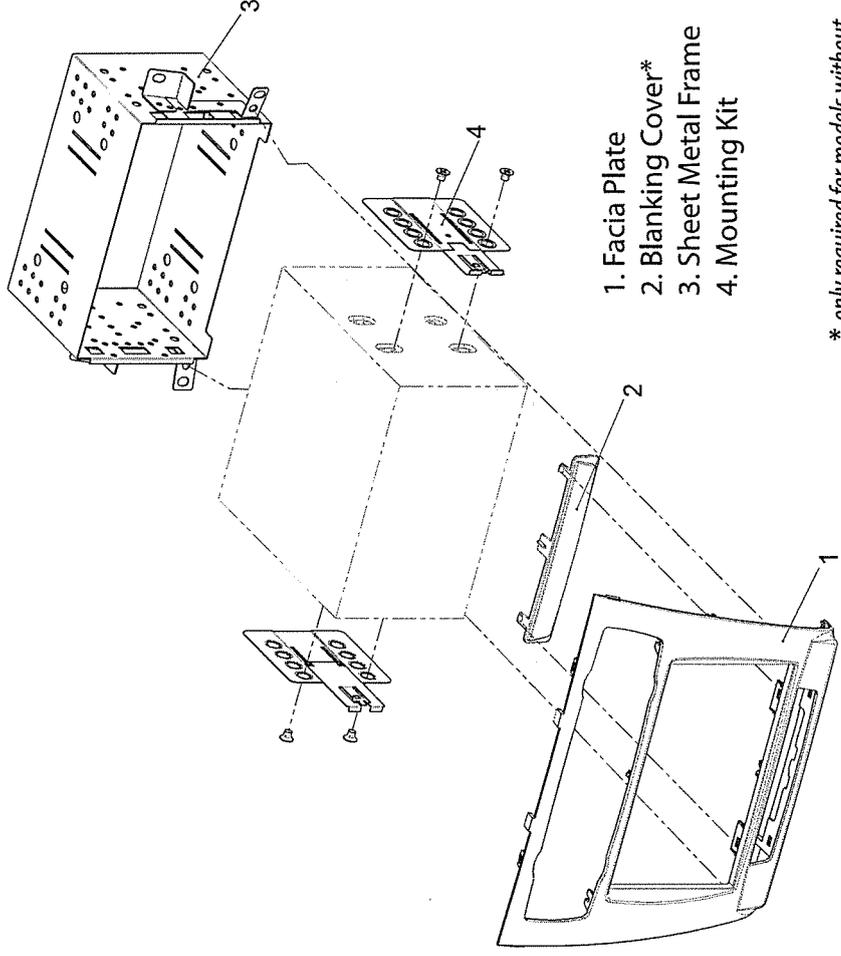

* only required for models without
switch panel under climate control