



...connecting to the aftermarket


CT23MB14

# Installation Manual: Mercedes C Class W204 2007>


Kit Includes:

A: 1 x 2 Din Facia Plate


B: 1 x Pair of Brackets

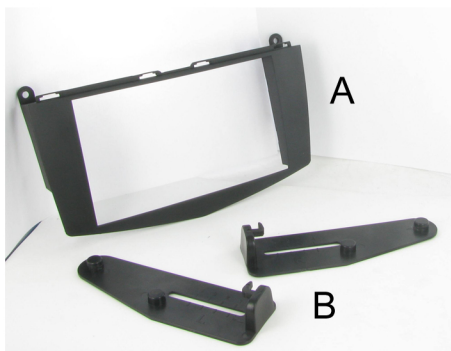


1. Mount the brackets (B) to both sides of the aftermarket head unit.

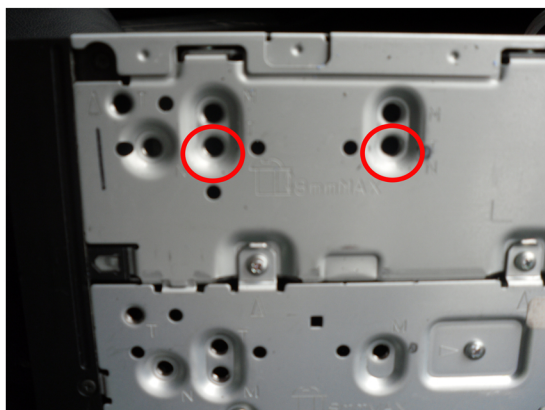

The holes in which the bracket should be screwed are circled

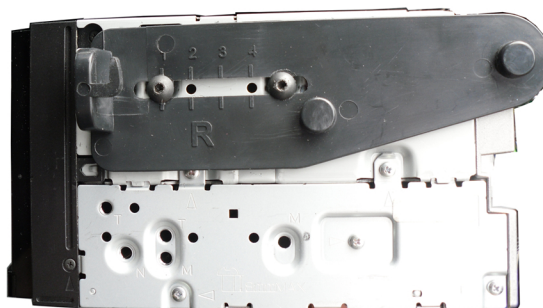

Right

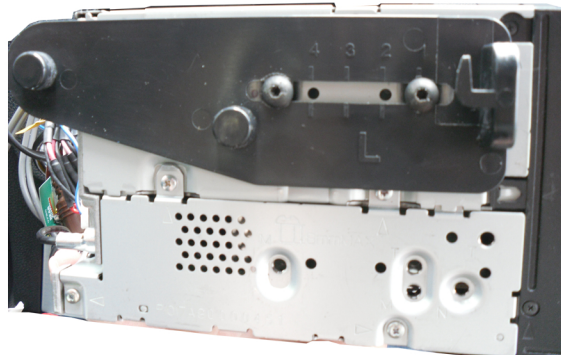

Left



*...connecting to the aftermarket*



2. Using a panel removal tool, gently lever the airvents forward above the OEM radio.



3. Disconnect the two blue connectors from the airvent panel. Store panel safely for re-fitting later.



4. Remove two screws on the top left and top right of the OEM stereo. Lift up tabs on both sides as circled.

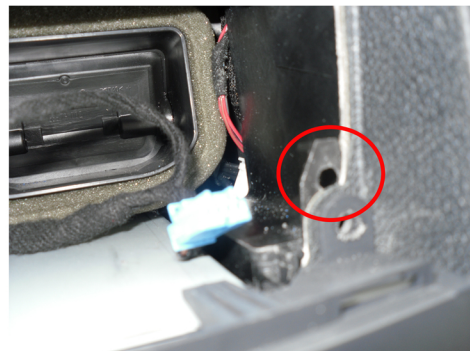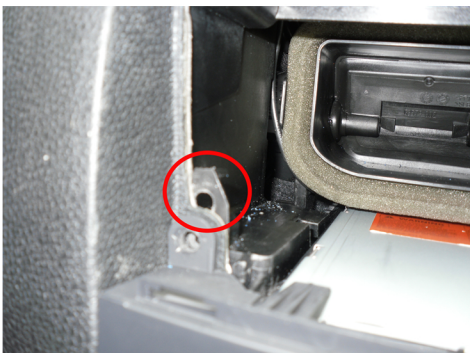







*...connecting to the aftermarket*

5. To remove OEM stereo, pull the unit forward and then angle up to release it from the guide rail. The guide knobs on the OEM stereo are shown below. Once the head unit is free from the dash, disconnect all connectors from the back and remove.

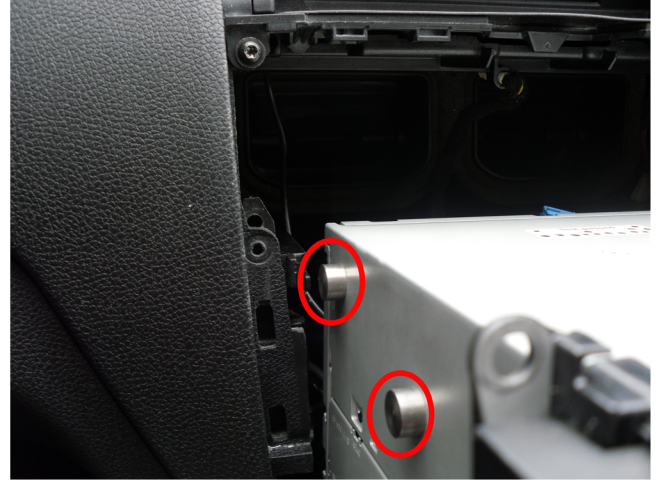

## Installing the Aftermarket head unit

6. Ensure all wires are clear of the aperture. Slide the head unit back into the dash. Ensure that the guide knobs are lined up with the guide rails as shown.

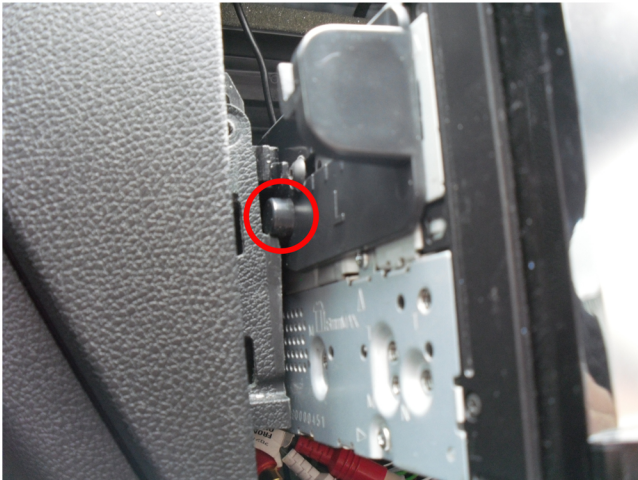



*...connecting to the aftermarket*

7. Re-fit the airvents. Ensure that the two blue connectors are re-attached. Slide the airvent back into place. Installation is now complete.

