


- **BMW Mini (R56)**
with automatic climate control

Compatible with double DIN devices

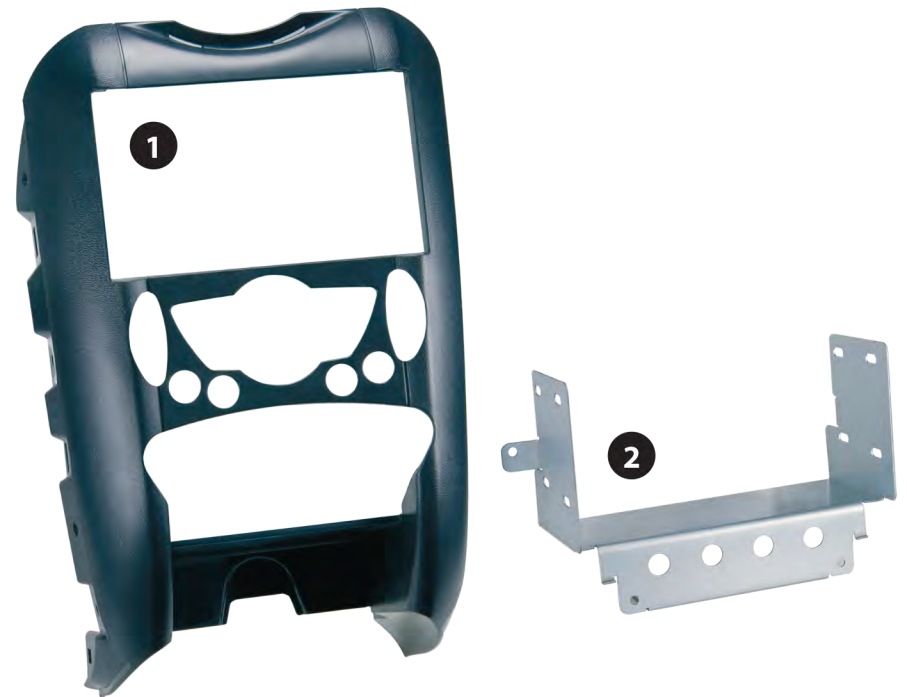

Double DIN Kit contents

- (1) Center console
- (2) Mounting Bracket

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

Installation Kit CT23BM02




1. BMW Mini (R56) with automatic climate control




2. Clip out the air vent grill at the top of the dashboard

Remove 2 screws
(see arrows)

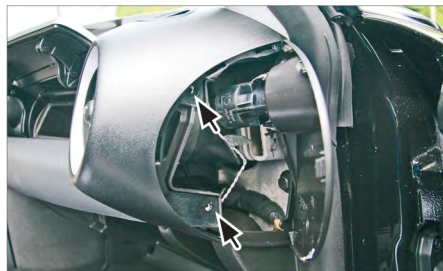

3. Unclip side panel

Remove 2 screws (see arrows)

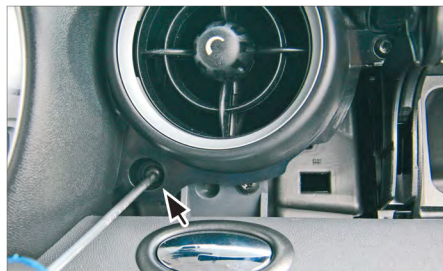

4. Open the glove box.
Remove decor panels at both sides

Remove screw under air vent
left and right side

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

Installation Kit CT23BM02



5. Remove screw beside air vent



6. Remove cover of harzard light switch



7. Remove 2 screws of the rev counter

Remove decor panel



8. Remove 4 screws of the knee protector

proceed with step 9 on next page

Installation Kit CT23BM02

9. Open the lower glove box

Remove 3 screws

Remove knee protector

10. Unclip and remove side panels of the center console

Remove 4 screws
(2 at each side)

Remove center console by pulling it towards your direction

11. Remove 4 screws, see arrows

Take out speedometer unit and head unit

12. Remove air condition control unit

Installation Kit CT23BM02

13. Fix the Double-DIN navigation with the mounting bracket

14. Connect all required circuit points

Place the Double-DIN head unit at the dash board

Fix it with 2 screws

15. Mount the air condition control unit

Place new center console

Install everything in reverse order to finish installation

