

## Installation Manual Double DIN Kit




Remove the odometer cover frame.



Remove the plastic shell of the steering.



Remove the OEM head unit by unscrewing the four screws circled.

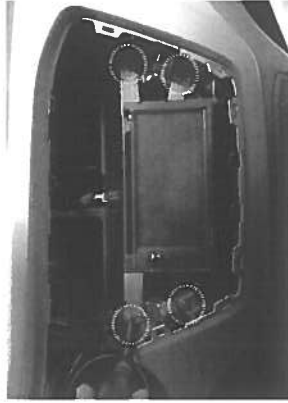

Take the left and right brackets and mount them on the aftermarket unit each with the supplied screws. Connect all cables, verify the proper functioning of the system and insert the unit into the housing. Fix it with screws saved before.



Remove the original panel. There are no screws but only pressure clips; take care during this operation. Remove from it and save the air vents, the hazard lights button and the white clips.



Place the clips saved before on the new fascia plate supplied, mount the air vents and hazard lights button. Mount the fascia plate on the dashboard, the plastic shell of the steering and the odometer cover frame. This is the final result.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

# HYUNDAI

## i20 2015 ->

Compatible with double DIN devices



Double DIN Kit content

Facia Plate  
Mounting Brackets + screws

02/2015 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.