




1

1 Remove the original plastic and the original car unit.




2

2 Unscrew the four screws circled in the figure and remove the OEM radio.

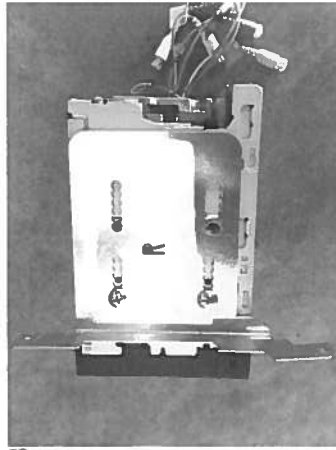

3

3 Put the mounting brackets on the new fascia plate provided and fix them with screws. Pay attention to the letters on the brackets.

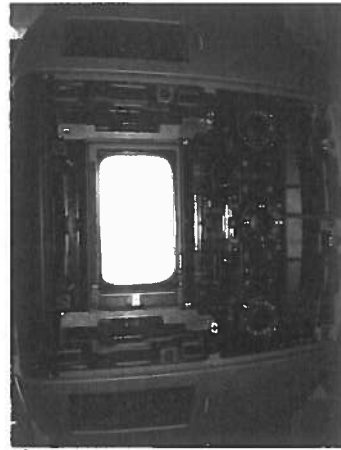

4

3 Take the AFT unit and fix it to the assembly with screws. Adjust the distance during the fixing in order to reach the right ledge of the unit.



5

5 Connect all cables, verify the proper functioning of the system and insert the radio-frame into the housing. This is the final result.

Facia plate installation kit for:

# MERCEDES


**Model:** Vito V447 / Sprinter W906

**Year:** 2015>

**Kit content:** double DIN facia plate  
mounting brackets + screws

**Compatibility:** Compatible with double DIN device

**Customer code:**

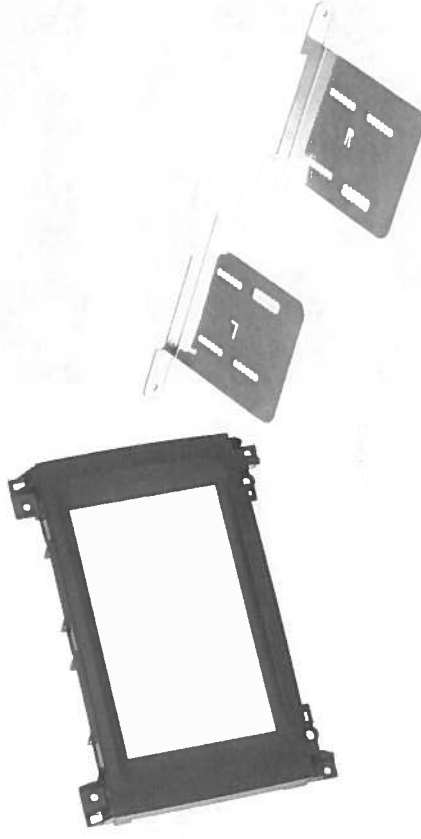

## INSTALLATION MANUAL