

Kia Sportage 2015>

For QL Models



Tools Required: _____

- **Panel Removal Tool/s**
- **Screwdriver/s**

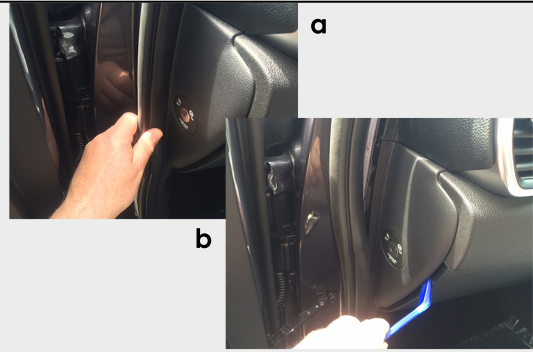
DISCLAIMER

This instruction booklet is based on carefully documented data and research. Connects2 cannot be held responsible for discrepancies/inconsistencies that may occur due to automobile manufacturing changes, options, or damage that may occur in the vehicle during the installation of components while using this booklet

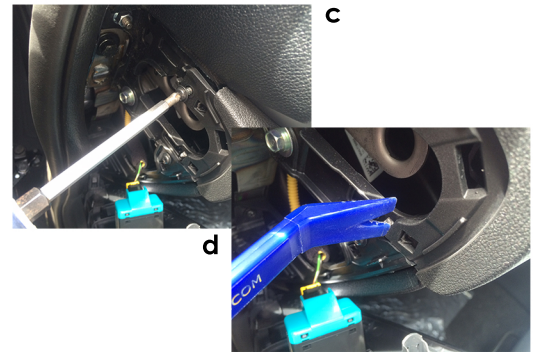
Need help with your installation? Visit support.connects2.com

STEP ONE

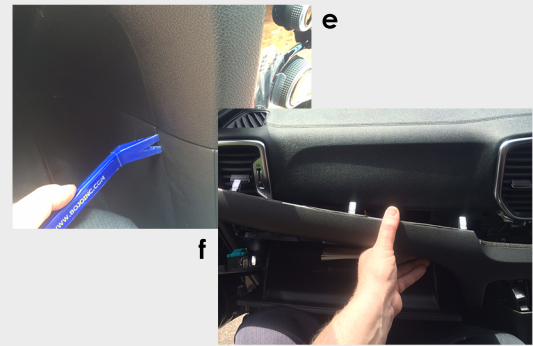
Pull back the door seal (a) and use a panel removal tool to unclip the end panel of the dash (b)

**STEP TWO**

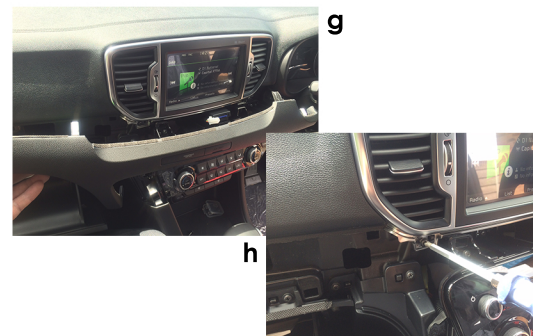
Remove the securing screw from beneath the panel (c), followed by both location clips (d)

**STEP THREE**

Use a panel removal tool to unclip the top of the lower centre console pillar (e), and the centre panel (f)

**STEP FOUR**

Remove the centre panel and unplug the airbag warning light (g). Remove the screw below the vent as shown (h)

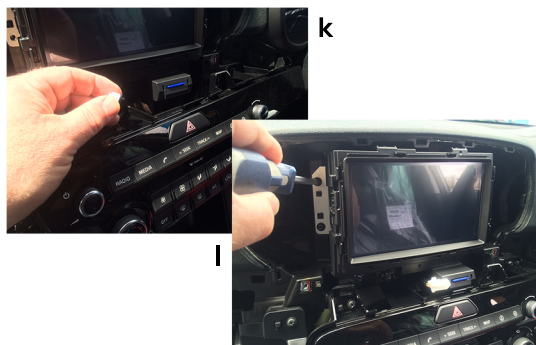


STEP FIVE

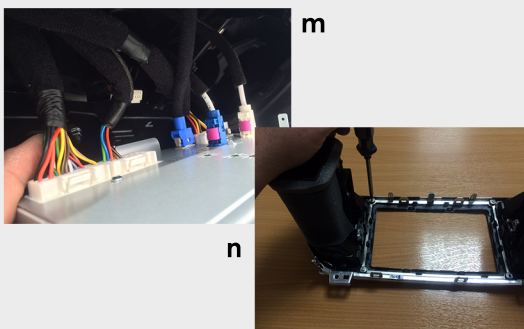
Use a panel removal tool to release the air conditioning vent panel from around the head unit (i). Use a screwdriver to remove the three retaining screws from around the head unit (j)

**STEP SIX**

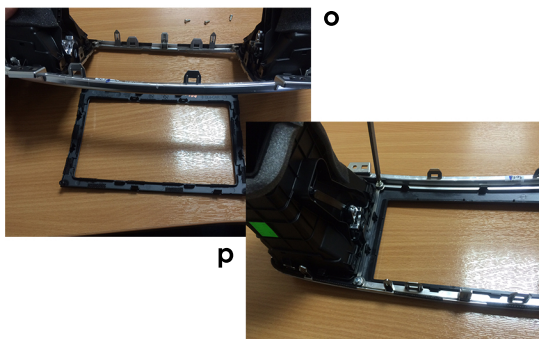
Pull the air conditioning panel away from the dashboard (k). Remove the (4) stereo retaining screws from around the head unit (l)

**STEP SEVEN**

Unplug all connections from the back of the stereo and remove the stereo. (m). Remove the (4) inner surround screws from the OEM fascia panel (n)

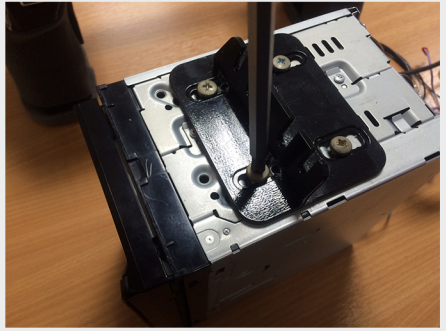
**STEP EIGHT**

Unclip inner panel (o) and screw the new inner panel in place, using the OEM screws (p)



STEP NINE

Use a screwdriver to attach the brackets to the new head unit (q)



q

STEP TEN

Make all connections to the head unit, insert stereo into the dashboard, and attach the brackets using the original screws (r)



r

STEP ELEVEN

Either attach the trim piece to the inside of the inner panel, or place on top of new stereo. This depends on preference and dimensions of stereo (s)



s

STEP TWELVE

Reinstall all components in reverse order of disassembly to complete your installation



t