



...connecting to the aftermarket

CAM-AU1-AD

Audi Camera Add On Interface



INSTRUCTION MANUAL

www.connects2.com

Designed and
Engineered
in the UK.



CAM-AU1-AD


This product allows the addition of an aftermarket reverse camera to the OEM screen in a range of Audi vehicles with Concert/Symphony head units.

Product Contents

1. Interface
2. Harness x 3
3. Instruction

Application

Audi A4 - 2008>
Audi A5 - 2007>
Audi Q5 - 2008>

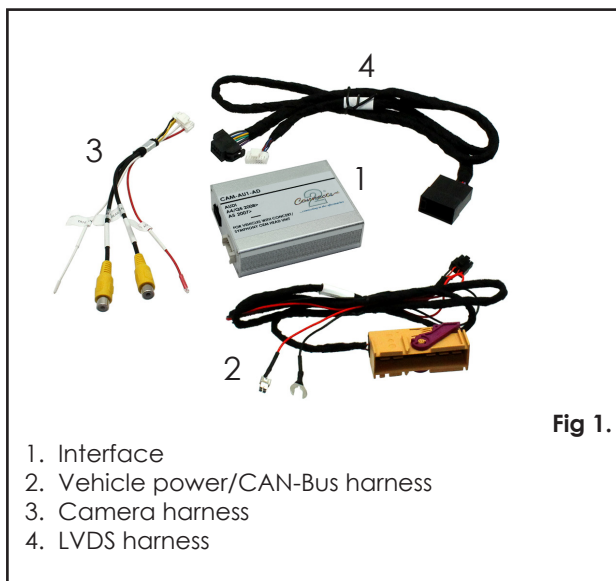

Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure you use the correct tools to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

Technical Support

Connects2 want to provide a fast and suitable resolution should you encounter any technical issues. With this in mind, when contacting Connects2, try to provide as much Information as possible. This will speed up the process and help us to help you.

Please use our dedicated online technical support centre: support.connects2.com




Subscribe to our YouTube Channel for installation guides and tips... www.youtube.com/connects2

FITTING GUIDE


1. Remove the Concert/Symphony head unit.



2. On the rear of the Concert/Symphony head unit, disconnect the LVDS connector (circled). Connect this into the female connector of the supplied LVDS harness (Fig 1, 4). Connect the male end back into the head unit.

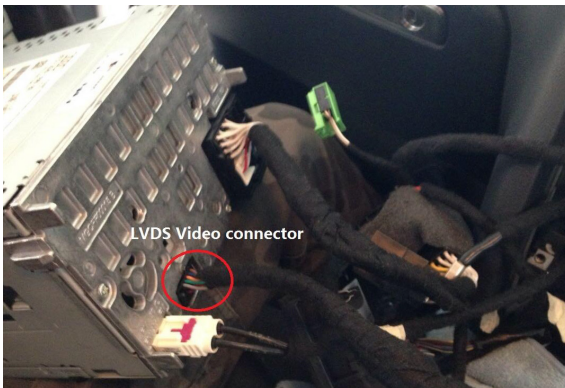

3. Locate the fuse box on the side of the dashboard. Take off the cover and locate the 46 way beige connector with the pink latch. Disconnect this and replace with the supplied vehicle power/CAN-Bus harness (Fig 1, 2). Connect the flying red wire to an ACC fuse and the black wire to Ground.

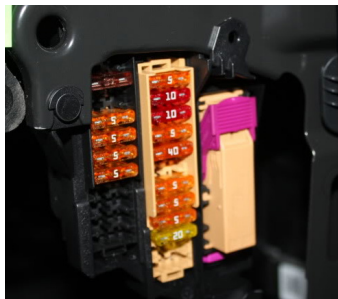

FITTING GUIDE

4. Set the dipswitches on the interface according to your required setup.

Dipswitch	On/Off	Function
1	Off	Radar Image Enabled
	On	Radar Image Disabled
2	Off	Front Camera Off
	On	Front Camera On
3	Off	Guidelines on
	On	Guidelines off
4	Off	Not Used
	On	Not Used

5. Connect the white 16 way camera harness connector (Fig 1, 3) to the interface. Make the camera connections as follows:



Wire Colour	Function (Label)
Red	Accessory 12V Out (Cam Acc)
White	Reverse signal in (Trig in)
Yellow (RCA)	Front camera video in (Front Cam)
Yellow (RCA)	Rear camera video in (Rear Cam)