

Can Bus: ALFA ROMEO 4C 2014⇒

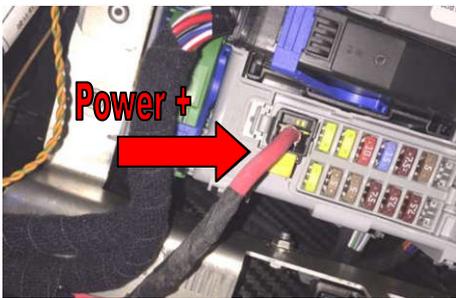
DIP SWITCHES SELECTIONS OR SOFTWARE

from **CARLIST29**
and forward



ELECTRICAL CONNECTIONS BETWEEN ALARM AND VEHICLE

Function	Wire alarm colour	Position and vehicle connection	
Power Supply Pic. 1 / 2	Red	Connect to the RED wire 6 mm ² diameter in the BLACK connector in the grey BCM module located under the kickwall passenger side.	
	Black	Connect to the BLACK/PURPLE wire in the WHITE/RED connector located over the grey BCM module under the kickwall passenger side.	
CAN BUS H Pic. 3	White/Green	Connect to the BLUE pos. 43,	in the small BLACK/BLUE connector in the grey BCM module located under the kickwall passenger side..
CAN BUS L Pic. 3	White/Brown	Connect to the WHITE pos. 42,	
BLINKER Hazard - Pic. 3	Yellow/Green	Connect to the GREEN/RED,	
Horn	White/Red	Info not available yet.	

		
Pic. 1	Pic. 2	Pic. 3

Optional connection:

Central door looking command	PURPLE wire (opening command)	Info not available yet.
	YELLOW/BLUE wire (Closure command)	
Engine block 10A	GREEN wires:	Info not available yet.
COMFORT command	Brown/Black:	Info not available yet.