



**KIA PRIDE**

	1-+12 VOLT IGNITION WIRE	9-Speaker RR+	13-Speaker LF+
	2-GND	10-Speaker RR-	14-Speaker LF-
	3-+12 VOLT BATTERY WIRE	11-Speaker RF+	15-Speaker LR+
	4-Dash Light Dimmer Wire	12-Speaker RF-	16-Speaker LR-

**KIA AUK-2008**

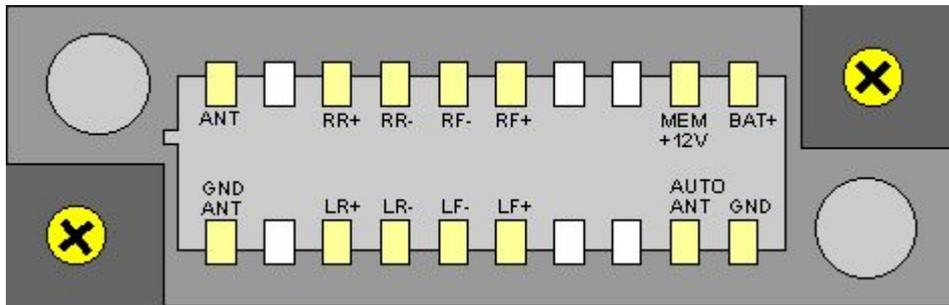


**KIA AUK-2070**

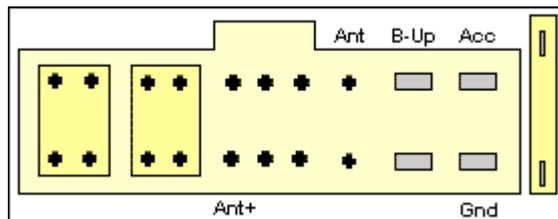

**KIA SPECTRA**



### 16 Pin Connector

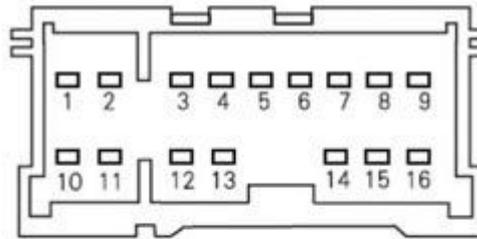

1. BACK UP(+)
  2. ILL (+)
  3. REAR R(+)
  4. FRONT R(+)
  5. TEL MUTE
  6. STEERING REMOCON
  7. FRONT L(+)
  8. REAR L(+)
  9. GND
  10. ACC(+)
  11. ILL (-)
  12. REAR R(-)
  13. FRONT R(-)
  14. FRONT L(-)
  15. REAR L(-)
  16. AUTO ANTENNA
- 

**Kia Spectra 2005 LX**




[ AM/FM/Cassette ]

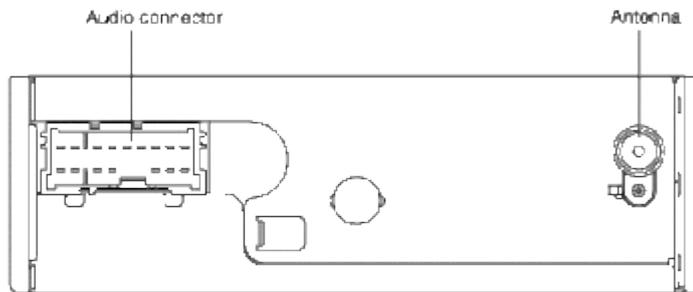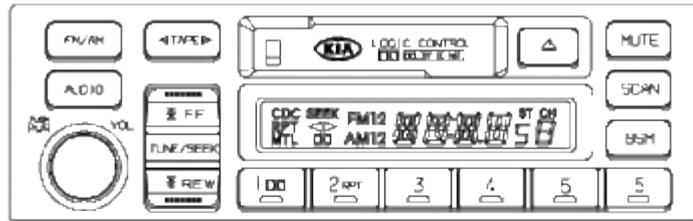

Audio connector	Terminal	Description
	1	Antenna
	2	Rear left speaker(-)
	3	Front left speaker(-)
	4	Front right speaker(-)
	5	Rear right speaker(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left speaker(+)
	10	Front left speaker(+)
	11	N.C.
	12	N.C.
	13	Front right speaker(+)
	14	Rear right speaker(+)
	15	Illumination(+)
	16	Battery(+)

**Kia Sorento 2011-2013**

[RADIO/MP3/CDC(PA765)]

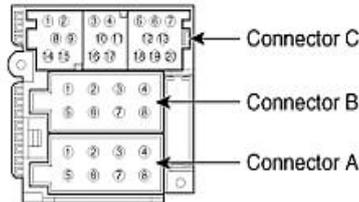
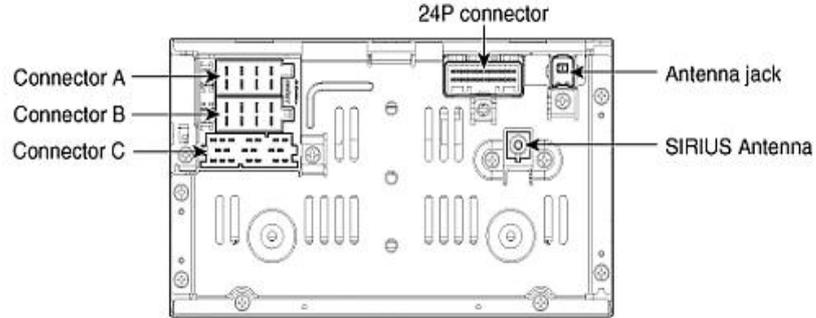
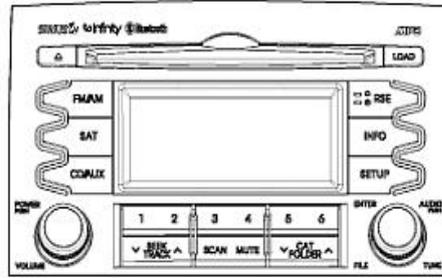


NO	Connector A	Connector B
1	Speed	LVDS GND
2	Illumination (+)	LVDS (-)
3	Remote antenna	-
4	Battery (+)	-
5	-	-
6	ACC	LVDS (+)
7	Illumination (-)	-
8	GND	-


NO	Connector C	NO	Connector C
1	MIC(+)	11	Aux Input Detect
2	MIC(-)	12	USB D(+)
3	Aux Input-R	13	USB iPod GND
4	Aux Input-L	14	Tel Mute
5	-	15	-
6	USB D(-)	16	S/Wheel Remote
7	CAN Low	17	Remote GND
8	-	18	-
9	Detent	19	USB iPod VOD
10	Aux GND	20	CAN High

24P connector		NO	Description	NO	Description	NO	Description
		1	-	9	RSE LIN GND	17	-
		2	-	10	-	18	-
		3	-	11	-	19	RSE L out (+)
		4	RSE R in (+)	12	-	20	RSE L out (-)
		5	RSE R in (-)	13	-	21	RSE L out GND
		6	RSE R in GND	14	-	22	RSE R out GND
		7	RSE L in (+)	15	-	23	RSE R out (+)
		8	RSE L in (-)	16	-	24	RSE R out (-)


**KIA Forte SX**

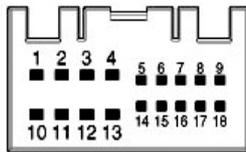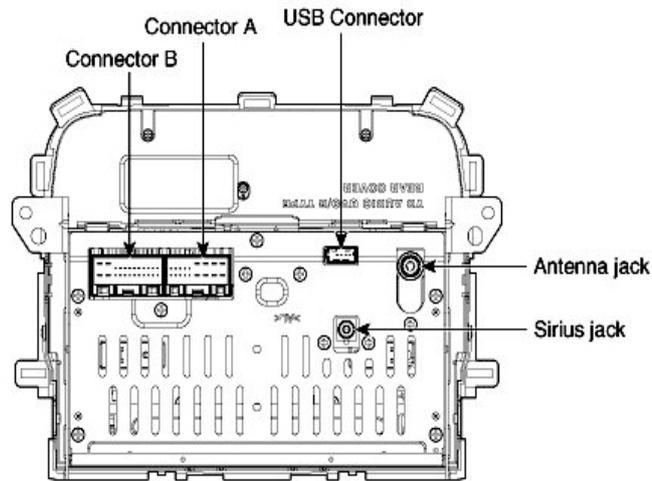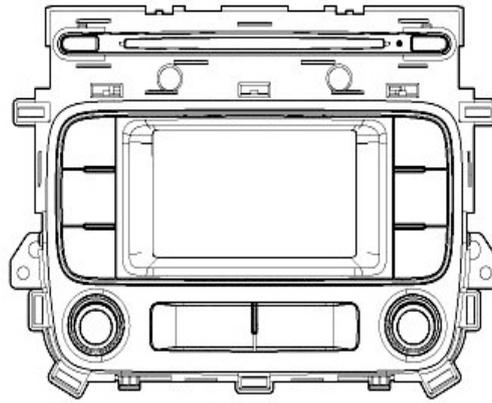

Connector A

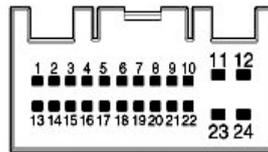

Connector B

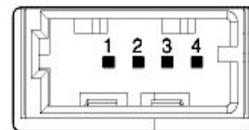

USB Connector

No.	Connector A
1	Rear left speaker (+)
2	Front left speaker (+)
3	Front right speaker (+)
4	Rear right speaker (+)
5	-
6	-
7	-
8	Illumination (+)
9	-
10	Rear left speaker (-)
11	Front left speaker (-)
12	Front right speaker (-)
13	Rear right speaker (-)
14	-
15	-
16	Door unlock
17	Illumination (-)
18	Remote antenna
19	
20	
21	
22	
23	
24	

No.	Connector B
1	CAN high
2	-
3	-
4	Steering remote
5	-
6	Camera video input
7	Camera battery (+)
8	AUX R Input
9	AUX ref. ground
10	MIC(+) (Bluetooth)
11	ACC
12	B(+)
13	CAN low
14	-
15	Auto light
16	Vehicle speed
17	Remote GND
18	Camera video ground
19	R position
20	AUX detect
21	AUX L Input
22	MIC(-) (Bluetooth)
23	Camera power ground
24	Power GND

No.	USB Connector
1	USB/ iPod 5V
2	USB data (-)/ iPod Tx
3	USB data (+)/ iPod Rx
4	USB/ iPod ground
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	

