



20. as needed fix speaker with cyanoacrylate adhesive

Spare OEM hazard light switch by Ford required. Ford Part-No.: 1519127



21. Mount
- air vents
- hazard light switch
to facia plate

Push facia plate on dash board until it snaps in



22. Fix facia plate with 2 OEM screws (see arrows)



23. Re-install everything in reverse order to finish installation



Part No.: CT23FD29
Piano Black


Ford C-Max 2011 >

Part No.: CT23FD41
Matte Black

Ford Kuga 2013 >, Escape 2012 >

Compatible with these double DIN devices

Double-DIN Navigation

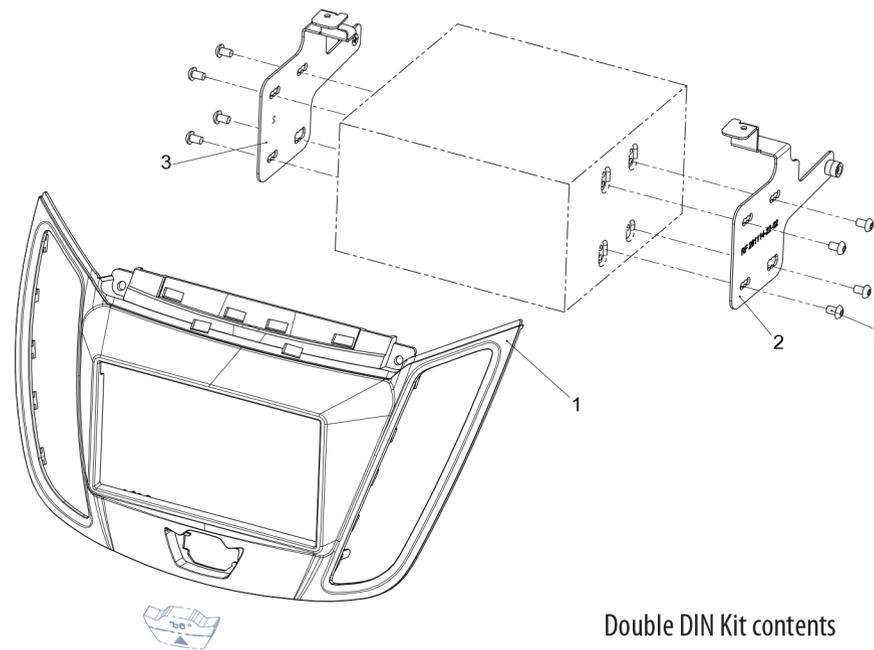

Spare OEM hazard light switch
by Ford required
Ford Part-No.: 1519127

Double DIN Kit contents

- (1) Facia Plate
- (2) Mounting Bracket right
- (3) Mounting Bracket left
- (4) flat headed screws



1. Ford C-MAX with OEM radio



2. Unclip speaker grill at top of dash board carefully




3. Remove speaker grill



4. Unclip cover of center console




17. Dashboard after plastic cut out

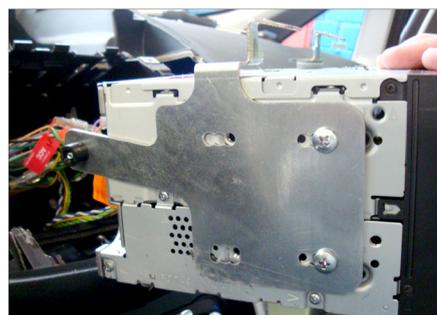


18. Fix mounting brackets to Double DIN head unit

Connect all required circuit points

Push Double DIN head unit into dash board

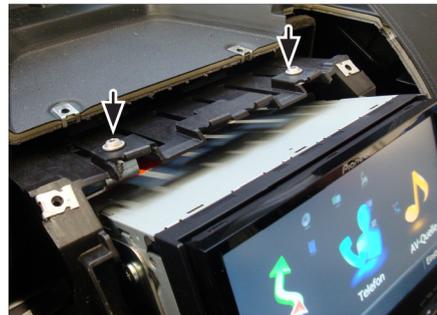


19. Fix Double DIN head unit

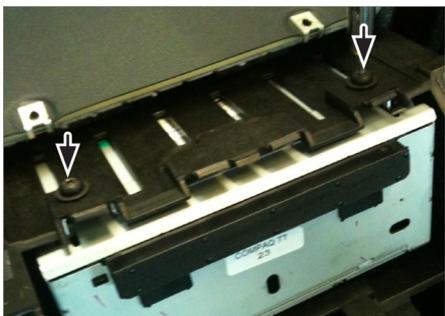

14. Remove screws of OEM Radio/CD unit
Remove OEM Radio/CD unit



15. Cut away plastic to clear space for Double DIN head unit

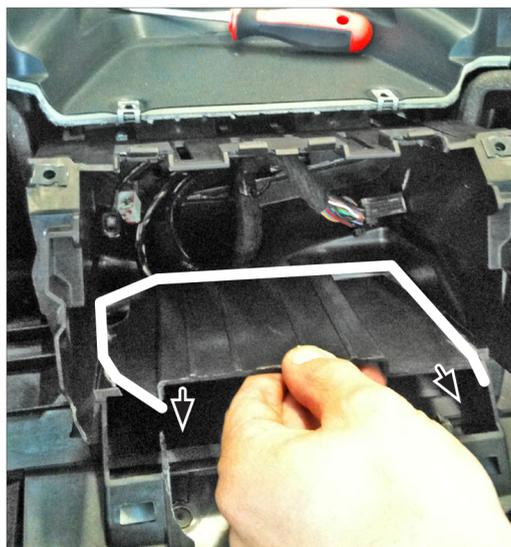

16. Remove plastic




5. Remove screws of center console



6. Unclip cover center console



7. Remove top panel cover

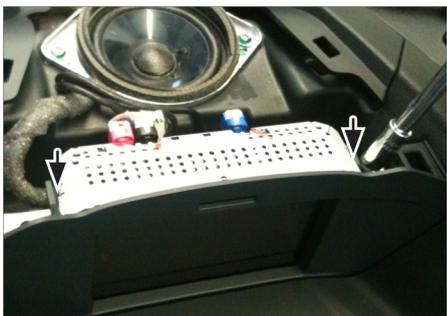


8. Unclip display




9. Remove display



10. Unclip center panel

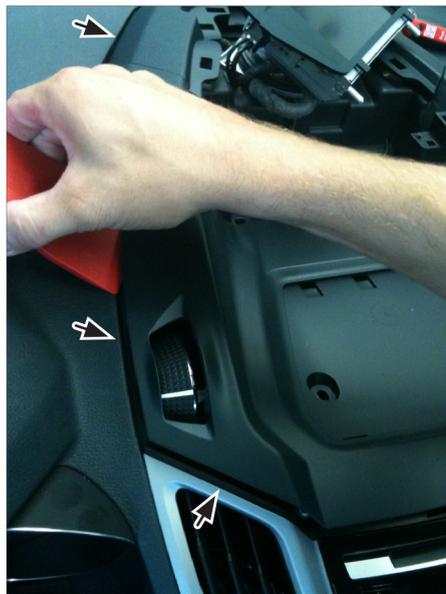

11. Remove screw (see arrow)

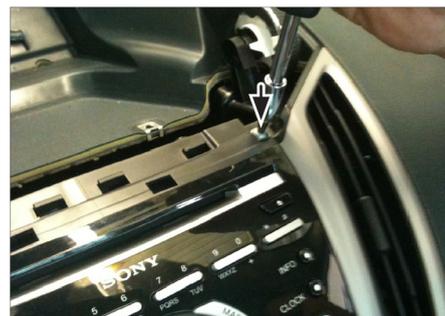

12. Remove screws on top of OEM head unit (left and right)



13. Unclip air vents
Remove air vents